

# **Technical Data Sheet**

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

CE

# Temperature and differential pressure transmitter


# **CP 210**


# **KEY POINTS**

- Range from -100/+100 Pa to -2000/+2000 mbar (according to, see "Part number")
- Input Pt100 on terminal block for temperature measurement, range from -100 to
- +400 °C (probes as option)
- Configurable intermediate ranges
- 4 wires analogue output 0-5/10 V or 0/4-20 mA
- Power supply 24 Vdc/Vac or 230 Vac (optional 115 Vac)
- Trend indicator
- ABS V0 housing, IP65, with or without display
- "1/4 turn" system mounting with wall-mount plate
- Solenoid valve for auto-calibration (only on CP211 and CP212 models)



# FEATURES OF THE HOUSING

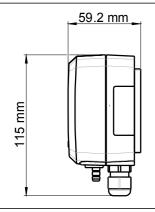

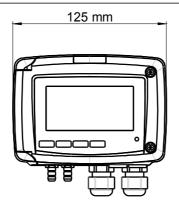

H: 230 Vac (optional 115 Vac)

Material: ABS V0 as per UL94

Protection: IP65

**Display:** 75 x 40 mm, LCD 19 digits 2 lines. **Height of digits:** Values: 10 mm; Units: 5 mm

**Connection :** Ribbed Ø 6.2 mm (CP211/212\*213)

Compression for tubes Ø4x6 mm (CP214/215)


 $\textbf{Pass-through} \ : \text{for cables } \varnothing \text{ 6 mm maximum}$ 

Cable gland : for cables  $\emptyset$  8 mm maximum

Weight: 320 g

# PART NUMBER

To order, just add the codes to complete the part number :

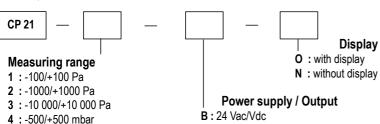

Example : CP 211 - HO

Pressure transmitter -100/+100 Pa measuring range, with

power supply 115 or 230 Vac, with display

# **TECHNICAL FEATURES**

5:-2000/+2000 mbar

Units of measurement	CP211/212/213: Pa, mmH <sub>2</sub> O, mbar, inWG, mmHG, daPa, kPa, hPa CP214/215: mbar, mmH <sub>2</sub> O, kPa, inWG, mmHG, hPa, daPa, PSI CP211/212/213/214/215 (temperature Pt100): °C / °F
Accuracy*	CP211/212: $\pm 0.5\%$ of reading $\pm 2$ Pa; CP213: $\pm 0.5\%$ of reading $\pm 10$ Pa; CP214: $\pm 0.5\%$ of reading $\pm 0.5$ mbar CP215: $\pm 0.5$ of reading $\pm 2$ mbar CP211/212/213/214/215 (Pt100 temperature): $\pm 0.5\%$ of reading $\pm 0.5\%$ C
Response time	1/e (63%) 0.3 s
Resolution	$ \begin{array}{l} \textbf{CP211/212:} \ 1 \ Pa; \ 0.1 \ mmH_{2}O; \ 0.01 \ mbar; \ 0.01 \ inWG; \ 0.01 \ mmHG; \ 0.1 \ daPa; \ 0.001 \ kPa; \ 0.01 \ hPa \\ \textbf{CP213:} \ 1 \ Pa; \ 0.1 \ mmH_{2}O; \ 0.01 \ mbar; \ 0.01 \ inWG; \ 0.01 \ mmHG; \ 0.1 \ daPa; \ 0.01 \ kPa; \ 0.01 \ hPa \\ \textbf{CP214:} \ 0.1 \ mbar; \ 1 \ mmH_{2}O; \ 0.01 \ kPa; \ 0.1 \ inWG; \ 0.1 \ mmHG; \ 0.1 \ hPa; \ 1 \ daPa; \ 0.01 \ PSI \\ \textbf{CP215:} \ 1 \ mbar; \ 1 \ mmH_{2}O; \ 0.1 \ kPa; \ 0.1 \ inWG; \ 1 \ mmHG; \ 1 \ hPa; \ 1 \ daPa; \ 0.1 \ PSI \\ \end{array}$
Tolerated overpressure	CP211/212 : 21 000 Pa - CP213 : 69 000 Pa - CP214 : 1400 mbar - CP215 : 4100 mbar

<sup>\*</sup>All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation

#### TECHNICAL SPECIFICATIONS 24 Vac / Vdc ±10 % Power supply 230 Vac ±10 %, 50-60 Hz 115 Vac ±10 %, 50-60 Hz Output 2 x 4-20 mA or 2 x 0-20 mA or 2 x 0-5 V or 2 x 0-10 V (4 wires) Maximum load: 500 Ohms (0/4-20 mA) Minimum load: 1 K Ohms (0-5/10 V) **Galvanic** isolation Inputs and outputs (115 Vac/230 Vac models) Outputs (24 Vac/Vdc models) Consumption 5 VA **Electromagnetical compatibility** EN61326 **Electrical connection** Screw terminal block for cables 2.5 mm<sup>2</sup> Kimo USB-Mini Din cable PC communication **Environment** Air and neutral gases Autozero Manual by push-button; Automatic by solenoid valve (only CP211/CP212) Type of fluid Air and neutral gases Operating temperature From 0 to +50 °C Storage temperature From -10 to +70 °C

# CONFIGURABLE INTERMEDIATE OR CENTER ZERO RANGES

Transmitter	Pressure range	Air velocity range*	
CP211	-100/+100 Pa	From 3 to 10 m/s	
CP212	-1000/+1000 Pa	From 3 to 30 m/s	
CP213	-10 000/+10 000 Pa	From 3 to 100 m/s	
CP214	-500/+500 mbar	Not available	
CP215	-2000/+2000 mbar	Not available	

\*These air velocity ranges are given for information, based on a Debimo differential probe (Cm = 0.81) and do not take into account temperature compensation.

# AIR FLOW AND AIR VELOCITY FUNCTION (available option on CP211, CP212 and CP213 instruments)

Class 210 transmitters have 2 analogue outputs that correspond to both displayed parameters. It is possible to activate one or two outputs and select for each output between pressure, air velocity and air flow (functions as option).

Linked to a differential pressure device (Debimo blade, Pitot tube, orifice plate, ...), they can be equipped as option with the SQR 3 function (square root function) allowing to calculate the air velocity and/or air flow in a duct from a differential pressure.

Features Functions	Measuring ranges	Units and resolutions
Air velocity*	From 3 to 100 m/s (according to model)	0.1 m/s – 0.1 fpm
Air flow*	From 0 to 99 999 dam³/h (according to air velocity and section)	$1 \text{m}^3/\text{h} - 0.1 \text{ m}^3/\text{s} - 1 \text{ dam}^3/\text{h}$ 0.11/s - 1  cfm

<sup>\*</sup>Differential pressure device (Pitot tube, Debimo...) as option

• Air velocity calculation : 
$$V = C_M \sqrt{\frac{2 \Delta P}{\rho}}$$

 $\rho = \frac{P_o}{287.1 \times (\Theta + 273.15)}$ 

With :  $\mathbf{C}_{_{\mathbf{M}}} \text{ : differential pressure device coefficient}$ 

- Pitot tube type L :  $C_{M} = 1.0015$ 


- Pitot tube type S :  $C_M = 0.84$ -Debimo blade : C, = 0.8165

Θ: given temperature (°C) P<sub>o</sub>: given atmospheric pressure (Pa)


Air flow calculation: Air flow (m³/h) = air velocity (m/s) x surface (m²) x 3600 Surface: setting of duct type (rectangular or circular) and duct size (mm or inch).

# INTEGRATION OF PRESSURE MEASUREMENT

The pressure measurement element is very sensitive and reacts to pressure changes. When making measurements in unstable air movement conditions, the pressure measurement may fluctuate. The integration coefficient (from 0 to 9) makes an average of the measurements and then helps avoid any excessive variations; it guarantees a stable measurement.

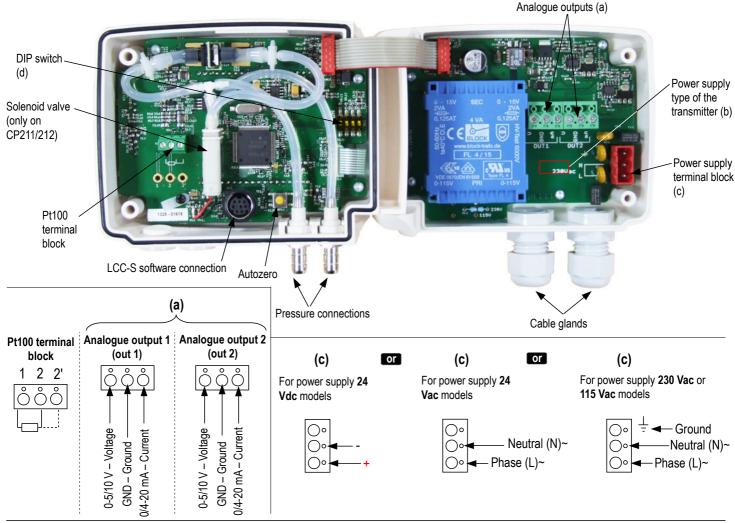


ELECTRICAL CONNECTIONS - as per NFC15-100 standard




This connection must be made by a qualified technician. To make the connection, the transmitter must not be energized.

Before making the connection, you must first check the power supply indicated on the transmitter board (see (b) on "Connections" part).

For transmitters with 24 Vdc power supply :



For transmitters with 24 Vac power supply :

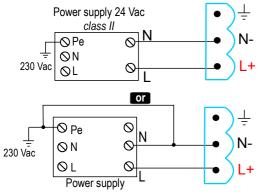


For transmitters with 115 or 230 Vac power supply:

Power supply 115 or 230 Vac


The selection of the output signal in voltage (0-10 V or 0-5 V) or in current (4-20 mA or 0-20 mA) is made via the DIP switch (d) of the electronic board of the transmitter: put the on-of switches as shown in the table below:

Configurations	4-20 mA	0-10 V	0-5 V	0-20 mA
Combinations	1 2 3 4	1 2 3 4	1 2 3 4	1 2 3 4

Connection of the output in current 4-20 mA:

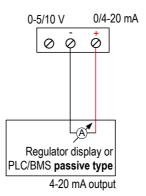

Connection of output in voltage 0-10 V:

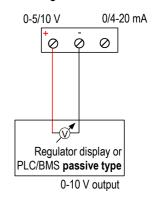

### **AUTOZERO**

#### **Auto-calibration**

CP210 transmitters have a temperature compensation of the gain from 0 to 50°C and an auto-calibration process that guarantees over the time an excellent stability and a perfect reliability of the measurement on low and high ranges.

Auto-calibration principle: the microprocessor of the transmitter drives a solenoid valve that compensates the possible drifts on the sensitive element over the time. The compensation is performed by the permanent adjustment of the zero. So the measurement of the differential pressure is then independent from the environmental conditions of the transmitter.

Advantage: no drift

Frequency of auto-calibration: resetable or from 1 to 60 minutes

#### Autozero

To perform an autozero, unplug the 2 pressure connections tubes and press the "Autozero" key.

On CP211 and CP 212 transmitters, it is not necessary to unplug the 2 pressure connection tubes.

When an autozero has been performed, "On" green light turns off then turns on, and on transmitters equipped with a display, "autoZ" is displayed.


# CONFIGURATION OF THE TRANSMITTERS

It is possible on the class 210 to configure all the parameters managed by the transmitter: units, measuring ranges, outputs, channels, calculation functions, etc, via different methods:

- Keypad for models with display : a code-locking system allows to secure the installation (See class 210 user manual).
- Software (optional) on all models. Simple user-friendly configuration. See LCC-SD user manual.

# Configurable analogue output :

Range with central zero (-50/0/+50 Pa), with offset zero (-300/0/+70 Pa) or standard range (0/+100 Pa), it is possible to configure your own intermediate ranges. Caution: the minimum difference between the high range and the low range is 20.

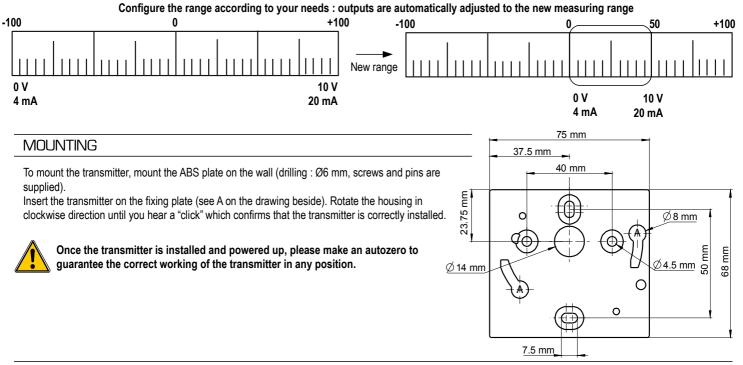

### **CALIBRATION**

Adjusting and calibration on site: The professional configuration interface, with a dynamic pressure calibration bench, enables you to adjust and calibrate your transmitters directly on site or in laboratories.

Outputs diagnostic: With this function, you can check with a multimeter (or on a regulator / display, or a PLC / BMS) if the transmitter outputs work properly. The transmitter generates a voltage of 0 V, 5 V and 10 V or a current of 4 mA, 12 mA and 20 mA

Certificate: Class 210 transmitters are supplied with adjusting certificates. Calibration certificates are available as an option.

### **MAINTENANCE**

Please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formalin, that may be used for cleaning rooms or ducts.

### OPTIONS AND ACCESSORIES

- LCC-S : configuration software with USB cable
- SQR/3 function (square root for the measurement of air velocity and air flow)
- Calibration certificate

115 Vac version transmitter

· Straight connections

Spherical coupling nut

- Connection tube
- · Connection fittings
- Through-connections

Distributed by:

# www.kimo.fr



**EXPORT DEPARTMENT** 

Tel: +33. 1. 60. 06. 69. 25 - Fax: +33. 1. 60. 06. 69. 29

e-mail: export@kimo.fr