# R&S®FPL1000 SIGNAL AND SPECTRUM ANALYZER

3 year warranty

**Specifications** 



Data Sheet Version 08.00

ROHDE&SCHWARZ

Make ideas real



## **CONTENTS**

Definitions	3
Specifications	4
Frequency	4
Sweep time	5
Resolution bandwidths	5
Level	6
Measurement speed	8
Trigger functions	8
I/Q data	8
Inputs and outputs	9
General data	10
Options	11
R&S®FPL1-B5 additional interfaces	11
R&S®FPL1-B9 internal generator	12
R&S®FPL1-B30 DC power input 12 V/24 V	14
R&S®FPL1-B31 internal lithium-ion battery	14
R&S®FSV-B34 charger (only needed for charging spare batteries)	14
Ordering information	15
Options	15
Recommended extras	15
Power sensors supported by the R&S®FPI 1-K9 option	16

### **Definitions**


#### Genera

Product data applies under the following conditions:

- Three hours storage at ambient temperature followed by 30 minutes warm-up operation
- Specified environmental conditions met
- · Recommended calibration interval adhered to
- · All internal automatic adjustments performed, if applicable

#### Specifications with limits

Represent warranted product performance by means of a range of values for the specified parameter. These specifications are marked with limiting symbols such as  $\langle , \leq , > , \geq , \pm \rangle$ , or descriptions such as maximum, limit of, minimum. Compliance is ensured by testing or is derived from the design. Test limits are narrowed by guard bands to take into account measurement uncertainties, drift and aging, if applicable.

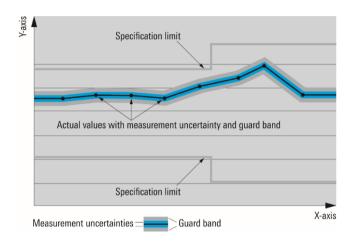

#### Non-traceable specifications with limits (n. trc.)

Represent product performance that is specified and tested as described under "Specifications with limits" above. However, product performance in this case cannot be warranted due to the lack of measuring equipment traceable to national metrology standards. In this case, measurements are referenced to standards used in the Rohde & Schwarz laboratories.

#### Specifications without limits

Represent warranted product performance for the specified parameter. These specifications are not specially marked and represent values with no or negligible deviations from the given value (e.g. dimensions or resolution of a setting parameter). Compliance is ensured by design.

### Typical data (typ.)

Characterizes product performance by means of representative information for the given parameter. When marked with <, > or as a range, it represents the performance met by approximately 80 % of the instruments at production time. Otherwise, it represents the mean value.

### Nominal values (nom.)

Characterize product performance by means of a representative value for the given parameter (e.g. nominal impedance). In contrast to typical data, a statistical evaluation does not take place and the parameter is not tested during production.

### Measured values (meas.)

Characterize expected product performance by means of measurement results gained from individual samples.

#### **Uncertainties**

Represent limits of measurement uncertainty for a given measurand. Uncertainty is defined with a coverage factor of 2 and has been calculated in line with the rules of the Guide to the Expression of Uncertainty in Measurement (GUM), taking into account environmental conditions, aging, wear and tear.

Device settings and GUI parameters are designated with the format "parameter: value".

Non-traceable specifications with limits, typical data as well as nominal and measured values are not warranted by Rohde & Schwarz.

In line with the 3GPP/3GPP2 standard, chip rates are specified in million chips per second (Mcps), whereas bit rates and symbol rates are specified in billion bits per second (Gbps), million bits per second (Mbps), thousand bits per second (kbps), million symbols per second (Msps) or thousand symbols per second (ksps), and sample rates are specified in million samples per second (Msample/s). Gbps, Mcps, Msps, ksps, ksps and Msample/s are not SI units.

## **Specifications**


## Frequency

Frequency range	R&S®FPL1003	5 kHz to 3 GHz
	R&S®FPL1007	5 kHz to 7.5 GHz
Frequency resolution		0.01 Hz
Scaling	standard	linear
_	with R&S®FPL1-K54,	linear, logarithmic
	RBW ≤ 1 MHz	

Reference frequency, internal, nomina	I	
Accuracy		(time since last adjustment · aging rate) + temperature drift + calibration accuracy
Aging per year	standard	1 · 10 <sup>-6</sup>
	with R&S®FPL1-B4 OCXO reference frequency option	1 · 10 <sup>-7</sup>
Temperature drift (0 °C to +50 °C)	standard	1 · 10 <sup>-6</sup>
	with R&S®FPL1-B4 OCXO reference frequency option	1 · 10 <sup>-7</sup>
Achievable initial calibration accuracy	standard	5 · 10 <sup>-7</sup>
·	with R&S®FPL1-B4 OCXO reference frequency option	5 · 10 <sup>-8</sup>

Frequency readout		
Marker resolution		0.01 Hz
Uncertainty		±(marker frequency · reference
		uncertainty + 10 % · resolution bandwidth
		+ 1/2 (span / (sweep points - 1)) + 1 Hz)
Number of sweep (trace) points	default value	1001
	range	101 to 100001
Number of measurement points	with R&S®FPL1-K54,	101 to 200001
	active EMI measurement	
Marker tuning frequency step size	marker step size = sweep points	span / (sweep points - 1)
	marker step size = standard	span / (default sweep points – 1)
Frequency counter resolution		1 Hz
Count accuracy		±(frequency · reference uncertainty +
		1/2 (last digit))
Display range for frequency axis		0 Hz, 10 Hz to max. frequency
Resolution		0.1 Hz
Maximum span deviation		0.1 %

Spectral purity			
SSB phase noise	frequency = 1000 MHz, carrie	frequency = 1000 MHz, carrier offset	
	100 Hz	-88 dBc (1 Hz) (nom.)	
	1 kHz	< -99 dBc (1 Hz)	
	10 kHz	< -105 dBc (1 Hz), -108 dBc (1 Hz) (typ.)	
	100 kHz	< -110 dBc (1 Hz), -115 dBc (1 Hz) (typ.)	
	1 MHz	< -130 dBc (1 Hz), -135 dBc (1 Hz) (typ.)	
	10 MHz	-152 dBc (1 Hz) (nom.)	

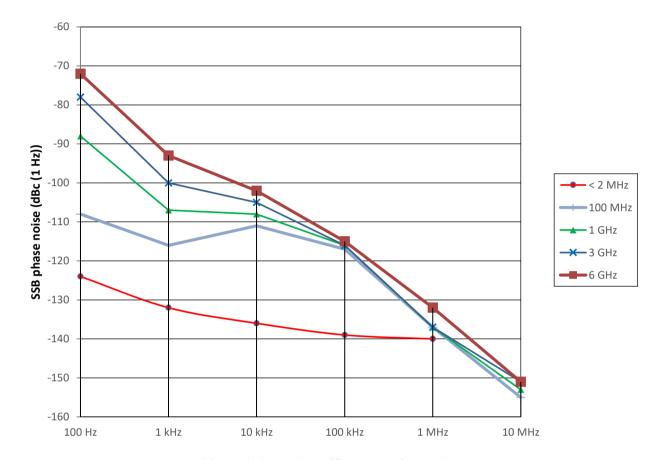

Measured phase noise at different center frequencies

## Sweep time

Range	span = 0 Hz	1 μs to 8000 s
	span ≥ 10 Hz, RBW ≥ 100 kHz	1 ms to 8000 s <sup>1</sup>
	span ≥ 10 Hz, RBW < 100 kHz	75 µs to 8000 s <sup>2</sup>
Sweep time accuracy	span = 0 Hz	0.1 % (nom.)
	span ≥ 10 Hz, RBW ≥ 100 kHz	3 % (nom.)

### **Resolution bandwidths**

Sweep filters and FFT filters		
Resolution bandwidths (-3 dB)	sweep filters	100 kHz to 10 MHz in 1/2/3/5 sequence
	FFT filters	1 Hz to 50 kHz in 1/2/3/5 sequence
Bandwidth uncertainty		< 3 % (nom.)
Shape factor 60 dB:3 dB		< 5 (nom.)

<sup>&</sup>lt;sup>1</sup> Net sweep time without additional hardware settling time.

<sup>&</sup>lt;sup>2</sup> Time for data acquisition for FFT calculation.

Channel filters		
Bandwidths (-3 dB)		100/200/300/500 Hz
		1/1.5/2/2.4/2.7/3/3.4/4/4.5/5/6/7.5/8.5/9/
		10/12.5/14/15/16/20/21/25/30/50/100/150/
		192/200/300/500 kHz
		1/1.228/1.5/2/3/3.75/5/10 MHz
Bandwidth uncertainty		< 2 % (nom.)
Shape factor 60 dB:3 dB		< 2 (nom.)
EMI filters (with R&S®FPL1-K54 option)		
Bandwidths (-6 dB)		10/100/200 Hz
		1/9/10/100/120 kHz
		1 MHz
Bandwidth uncertainty		< 3 % (nom.)
Shape factor 60 dB:6 dB		< 4 (nom.)
Video bandwidths	standard	1 Hz to 10 MHz in 1/2/3/5 sequence
Signal analysis bandwidth (equalized)	standard	10 MHz (nom.)
	::L D00@EDL4 D40 ::	40 1411 (

### Level

40 MHz (nom.)

with R&S®FPL1-B40 option

Maximum input level			
DC voltage		50 V	
CW RF power	RF attenuation 0 dB	RF attenuation 0 dB	
	RF preamplifier = off	20 dBm (= 0.1 W)	
	with R&S®FPL1-B22 option,	13 dBm (= 0.02 W)	
	RF preamplifier = on		
	RF attenuation ≥ 10 dB		
	RF preamplifier = off	30 dBm (= 1 W)	
	with R&S®FPL1-B22 option,	23 dBm (= 0.2 W)	
	RF preamplifier = on		
Pulse spectral density	RF attenuation 0 dB,	97 dB μV/MHz	
	RF preamplifier = off		
Maximum pulse voltage	RF attenuation ≥ 10 dB	150 V	
Maximum pulse energy	RF attenuation ≥ 10 dB, 10 µs	1 mWs	

Intermodulation			
1 dB compression of input mixer	RF attenuation 0 dB,	+7 dBm (nom.)	
(two tone)	RF preamplifier = off		
Third-order intercept point (TOI)	RF attenuation 0 dB, level 2 · -20 dB	RF attenuation 0 dB, level 2 · −20 dBm, Δf > 5 · RBW or 10 kHz, whichever is larger,	
	RF preamplifier = off		
	$10 \text{ MHz} \le f_{in} < 300 \text{ MHz}$	> 13 dBm, 16 dBm (typ.)	
	$300 \text{ MHz} \le f_{in} < 3 \text{ GHz}$	> 17 dBm, 20 dBm (typ.)	
	$3 \text{ GHz} ≤ f_{in} ≤ 7.5 \text{ GHz}$	> 15 dBm, 18 dBm (typ.)	
	with R&S®FPL1-B22 option, RF atte	nuation 0 dB, level $2 \cdot -40$ dBm, $\Delta f > 5 \cdot RBW$ or	
	10 kHz, whichever is larger, RF preamplifier = on		
	5 MHz ≤ f <sub>in</sub> < 7,5 GHz	0 dBm (nom.)	
Second-harmonic intercept (SHI)	RF attenuation 0 dB, level -13 dBm,	RF attenuation 0 dB, level –13 dBm, RF preamplifier = off	
	1 MHz < f <sub>in</sub> ≤ 900 MHz	45 dBm (nom.)	
	900 MHz < f <sub>in</sub> ≤ 3.75 GHz	70 dBm (nom.)	

Displayed average noise level (DANL)	0 dB RF attenuation, termination 50 Ω, log. scaling, normalized to 1 Hz RBW,	
	RBW = 1 kHz, VBW = 1 Hz, sample detector, +20 °C to +30 °C	
RF preamplifier off	5 kHz ≤ f < 100 kHz	-143 dBm (typ.)
	100 kHz ≤ f < 5 MHz	< -140 dBm, -143 dBm (typ.)
	5 MHz ≤ f < 3 GHz	< -149 dBm, -152 dBm (typ.)
	3 GHz ≤ f < 5 GHz	< -143 dBm, -146 dBm (typ.)
	5 GHz ≤ f ≤ 7.5 GHz	< -140 dBm, -143 dBm (typ.)

RF preamplifier on	3 MHz ≤ f < 10 MHz	< -155 dBm, -158 dBm (typ.)
(gain nom. 20 dB)	10 MHz ≤ f < 2 GHz	< -163 dBm, -166 dBm (typ.)
	2 GHz ≤ f < 3 GHz	< -162 dBm, -165 dBm (typ.)
	3 GHz ≤ f < 5 GHz	< -158 dBm, -161 dBm (typ.)
	5 GHz ≤ f < 7 GHz	< -156 dBm, -159 dBm (typ.)
	7 GHz ≤ f < 7.5 GHz	< -155 dBm, -158 dBm (typ.)

Spurious responses	mixer level ≤ –13 dBm, sweep optimization: auto or dynamic, scaling linear		
Image response	10 MHz ≤ f ≤ 3 GHz		
	f <sub>in</sub> – 2 · 4020.4 MHz (1st IF)	< -90 dBc (typ.)	
	f <sub>in</sub> – 2 · 820.4 MHz (2nd IF)	< -80 dBc	
	$f_{in} - 2 \cdot 20.4 \text{ MHz (3rd IF)},$	< -80 dBc	
	RBW ≤ 3 MHz		
	3 GHz < f ≤ 7.5 GHz,	< -70 dBc (typ.)	
	RBW ≤ 3 MHz		
Intermediate frequency response	2 MHz ≤ f ≤ 3 GHz		
	1st IF (4020.4 MHz)	< -80 dBc (typ.)	
	2nd IF (820.4 MHz)	< -80 dBc	
	3rd IF (20.4 MHz)	< -80 dBc	
	3 GHz < f ≤ 7.5 GHz	< -70 dBc	
Residual spurious response	0 dB RF attenuation		
	f ≤ 1 MHz	< -90 dBm (nom.)	
	f > 1 MHz	< -90 dBm	
Local oscillator related spurious	f < 3 GHz		
	1 kHz ≤ carrier offset ≤ 10 MHz	< -70 dBc	
	carrier offset > 10 MHz	< -80 dBc	
	3 GHz ≤ f < 7.5 GHz	< -70 dBc (typ.)	
Other interfering signals			
Subharmonic of 1st LO	20 MHz ≤ f < 3 GHz,	< -80 dBc (nom.)	
	spurious at 4020.4 MHz – 2 · f <sub>in</sub>		
Harmonic of 1st LO	20 MHz ≤ f < 3 GHz,	< -80 dBc (nom.)	
	mixer level < -25 dBm,		
	spurious at f <sub>in</sub> –2010.2 MHz		

Level display	
Logarithmic level axis	1 dB to 200 dB, in 1 dB steps
Linear level axis	10 % of reference level per level division, 10 divisions or logarithmic scaling
Number of traces	6
Trace detector	max. peak, min. peak, auto peak (normal), sample, RMS, average
Trace functions	clear/write, max. hold, min. hold, average, view
EMI detectors (with R&S®FPL1-K54)	quasi-peak, RMS-average, CISPR-average
Measurement marker detector (with R&S®FPL1-K54)	max. peak, average, quasi-peak, RMS-average, CISPR-average
Setting range of reference level	<ul><li>-130 dBm to (-13 dBm + RF attenuation</li><li>- RF preamplifier gain),</li><li>in steps of 0.01 dB</li></ul>
Units of level axis	dBm, dBμV, dBmV, dBμA, dBpW, V, A, W

Level measurement uncertainty			
Absolute level uncertainty at 50 MHz	RBW = 10 kHz, level -10 dBm, referen	RBW = 10 kHz, level –10 dBm, reference level –10 dBm, RF attenuation 10 dB	
	+20 °C to +30 °C	$< 0.3 \text{ dB } (\sigma = 0.1 \text{ dB})$	
	0 °C to +50 °C	$< 0.5 \text{ dB } (\sigma = 0.17 \text{ dB})$	
Frequency response	RF attenuation 10/20/30/40 dB, RF pre	eamplifier = off, +20 °C to +30 °C	
referenced to 50 MHz	5 kHz ≤ f < 3 MHz	< 1 dB (nom.)	
	3 MHz ≤ f < 3 GHz	$< 0.3 \text{ dB } (\sigma = 0.1 \text{ dB})$	
	3 GHz ≤ f < 7.5 GHz	$< 0.6 \text{ dB } (\sigma = 0.2 \text{ dB})$	
	any setting of RF attenuation, RF preamplifier = off, 0 °C to +50 °C		
	5 kHz ≤ f < 3 GHz	< 1 dB (nom.)	
	3 GHz ≤ f < 7.5 GHz	< 1.5 dB (nom.)	
	RF attenuation ≤ 20 dB,RF preamplifie	r = on, +20 °C to +30 °C	
	3 MHz ≤ f < 3 GHz	< 0.6 dB (nom.)	
	3 GHz ≤ f < 7.5 GHz	< 1 dB (nom.)	

Attenuator switching uncertainty	f = 50 MHz, 0 dB to 45 dB, referenced to 10 dB attenuation	$< 0.2 \text{ dB } (\sigma = 0.07 \text{ dB})$
Uncertainty of reference level setting		0 dB <sup>3</sup>
Bandwidth switching uncertainty	referenced to RBW = 10 kHz and sweep typ	pe FFT
	sweep type = FFT (RBW < 100 kHz)	< 0.1 dB (nom.)
	sweep type = sweep (RBW ≥ 100 kHz)	< 0.2 dB (nom.)

Nonlinearity of displayed level		
Logarithmic level display	S/N > 16 dB, 0 dB to -50 dB	$< 0.1 \text{ dB } (\sigma = 0.07 \text{ dB})$
Linear level display	S/N > 16 dB, 0 dB to -70 dB	5 % of reference level (nom.)

Total measurement uncertainty	signal level 0 dB to -50 dB below reference	e level, S/N > 20 dB, sweep time auto,
	sweep type = FFT, RF attenuation 10 dB, 2	20 dB, 30 dB, 40 dB, RF preamplifier = off,
	span/RBW < 100, confidence level 95 %, +	20 °C to +30 °C
	1 MHz ≤ f < 3 GHz	0.5 dB
	3 GHz ≤ f < 7.5 GHz	0.8 dB

## **Measurement speed**

Local measurement and display update	1001 sweep points, sweep optimization	1 ms (1000/s) (nom.)
rate	set to "speed"	
Maximum sweep rate, remote operation 4,5	trace average = on	0.9 ms (1100/s) (nom.)
Remote measurement and LAN transfer 4		3.2 ms (357/s) (nom.)
Marker peak search <sup>4</sup>		1.9 ms (nom.)
Center frequency tune + sweep + sweep		16 ms (nom.)
data transfer <sup>4</sup>		

## **Trigger functions**

Trigger		
Trigger source		free run, video, external, IF power,
		I/Q power
Trigger offset	span ≥ 10 Hz	0 s to 20 s
	span = 0 Hz	(-sweep time) to 20 s
Maximum deviation of trigger offset		±10 ns
IF power trigger		
Sensitivity	min. signal power	-60 dBm + RF attenuation -
-		RF preamplifier gain
	max. signal power	-15 dBm + RF attenuation -
		RF preamplifier gain
IF power trigger bandwidth	RBW > 5 MHz	40 MHz (nom.)
	RBW ≤ 5 MHz	6 MHz (nom.)
Gated sweep		
Gate source		video, external, IF power, I/Q power
Gate delay		0 s to 20 s, min. resolution 10 ns
Gate length		10 ns to 20 s, min. resolution 10 ns
Maximum deviation of gate length		±10 ns

### I/Q data

Interface		GPIB or LAN interface
Memory length		max. 25 Msample I and Q
Word length of I/Q samples		14 bit
Sampling rate	standard	100 Hz to 16 MHz
	with R&S®FPL1-B40 option	100 Hz to 100 MHz
Maximum signal analysis bandwidth	standard	12.8 MHz
(equalized)	with R&S®FPL1-B40 option	40 MHz

The setting of the reference level affects only the graphical representation of the measurement result on the display, not the measurement itself. Therefore, the reference level setting causes no additional uncertainty in measurement results.

<sup>&</sup>lt;sup>4</sup> Measured with a PC equipped with Intel<sup>®</sup> Core<sup>™</sup> i7 2.8 GHz and Gbit LAN interface.

<sup>&</sup>lt;sup>5</sup> Measurement is performed with a sweep count of 1000. The indicated speed is the average speed of 1 sweep.

Signal analysis bandwidth ≤ 10 MHz			
Amplitude flatness	f <sub>center</sub> ≥ 12 MHz and	±0.3 dB (nom.)	
	(1.25 · signal analysis bandwidth)	, ,	
Deviation from linear phase	f <sub>center</sub> ≥ 12 MHz and	±1° (nom.)	
	(1.25 · signal analysis bandwidth)		
Signal analysis bandwidth ≤ 40 MHz			
Amplitude flatness	f <sub>center</sub> ≥ 12 MHz and	±0.5 dB (nom.)	
	(1.25 · signal analysis bandwidth)		
Deviation from linear phase	f <sub>center</sub> ≥ 12 MHz and	±1.5° (nom.)	
	(1.25 · signal analysis bandwidth)		

## Inputs and outputs

RF input		
Impedance		50 Ω
Connector		N female
VSWR	RF attenuation ≥ 10 dB	
	10 MHz ≤ f < 3 GHz	< 1.5 (nom.)
	3 GHz ≤ f < 7.5 GHz	< 2 (nom.)
Setting range of attenuator	standard	0 dB to 45 dB, in 5 dB steps
	with R&S®FPL1-B25 option	0 dB to 45 dB, in 1 dB steps
RF preamplifier gain	with R&S®FPL1-B22 option	20 dB (nom.)

USB interface	4 ports, type	A plug, version 2.0

Reference output		
Connector		BNC female
Impedance		50 Ω
Output frequency	internal reference	10 MHz
	external reference	same as reference input signal
Level		> 0 dBm (nom.)

Reference input		
Connector BNC female		
Impedance	50 Ω	
Input frequency range	10 MHz ± 5 ppm	
Required level	> 0 dBm into 50 Ω	

External trigger/gate input	
Connector	BNC female
Trigger voltage	0.5 V to 3.5 V
Input impedance	10 kΩ

IEC/IEEE bus control	interface in line with IEC 625-2
	(IEEE 488.2)
Command set	SCPI 1997.0
Connector	24-pin Amphenol female
Interface functions	SH1, AH1, T6, L4, SR1, RL1, PP1, DC1,
	DT1, C0

LAN interface	10/100/1000BASE-T
Connector	RJ-45

External monitor		
Connector		DVI-D

### **General data**

Display	21 cm LC TFT color display (10.1")
Resolution	1280 × 800 pixel (WXGA resolution)
Pixel failure rate	< 1 · 10 <sup>-5</sup>

Data storage		
Internal	standard	solid-state drive (SSD) 32 Gbyte
External		supports USB 2.0 compatible memory
		devices

Environmental conditions		
Temperature	operating temperature range	0 °C to +50 °C
	storage temperature range	−20 °C to +70 °C
Climatic loading	without condensation	+40 °C at 85 % rel. humidity,
-		in line with EN 60068-2-30,

Mechanical resistance		
Vibration	sinusoidal	5 Hz to 55 Hz
		0.15 mm constant amplitude
		(1.8 g at 55 Hz);
		55 Hz to 150 Hz
		acceleration: 0.5 g constant;
		in line with EN 60068-2-6
	random	10 Hz to 300 Hz,
		acceleration 1.2 g (RMS),
		in line with EN 60068-2-64
Shock		40 g shock spectrum, in line with
		MIL-STD-810E method no. 516.4
		procedure I, MIL-PRF-28800F

EMC	in line with EMC Directive 2014/30/EU including IEC/EN 61326-1 <sup>6, 7</sup> , IEC/EN 61326-2-1, CISPR 11/EN 55011 <sup>6</sup> ,
	IEC/EN 61000-3-2, IEC/EN 61000-3-3

	I _	
Recommended calibration interval	1	vears
Recommended campiation interval	Z	veals

Power supply		
AC supply	without battery option	100 V to 240 V ± 10 %,
		50 Hz to 60 Hz ± 5 %,
		400 Hz ± 5 % class of protection I,
		in line with VDE 411
	with battery option	100 V to 240 V ± 10%,
		50 Hz to 60 Hz ± 5%
Current consumption	without options	nom. 1.7 A to 0.8 A
	with internal battery	nom. 3 A to 1.5 A
	(option R&S®FPL1-B31) in charge mode	
Safety		in line with EN 61010-1, IEC 61010-1,
		UL 61010-1, CAN/CSA-C22.2
		No. 61010-1
Test mark		CSA, CSA-NRTL

Dimensions and weight		
Dimensions	$W \times H \times D$	408 mm × 186 mm × 235 mm
		$(16.06 \text{ in} \times 7.32 \text{ in} \times 9.25 \text{ in})$
Net weight, nominal	without options	6 kg (13.22 lb)
_	with internal battery	7.3 kg (16 lb)

 $<sup>^{\</sup>rm 6}$   $\,$  Emission limits for class A equipment.

 $<sup>^{\</sup>rm 7}$   $\,$  Immunity test requirement for industrial environment (EN 61326 table 2).

## **Options**

### R&S®FPL1-B5 additional interfaces

User port	
Connector	25-pin D-Sub female
Output	TTL-compatible, 0 V/5 V, max. 15 mA
Input	TTL-compatible, max. 5 V

Noise source control and power sens	sor	
Connectors	for R&S®FS-SNSxx smart noise sources and R&S®NRP-Zxx power sensors	7-pin LEMOSA female
	for noise source control	BNC female
Noise source control output voltage		0 V/28 V, switchable,
		max. 100 mA (nom.)

IF/video/demod out		
Connector		BNC female, 50 Ω
IF out		
Bandwidth		equal to RBW setting
IF frequency		25 MHz
Output level	center frequency > 10 MHz, span = 0 Hz, signal at reference level and center frequency	0 dBm (nom.)
Video out	, , ,	
Bandwidth		equal to VBW setting
Output scaling	log. display scale	logarithmic
	lin. display scale	linear
Output level	center frequency > 10 MHz, span = 0 Hz, signal at reference level and center frequency	1 V, open circuit (nom.)

Audio output	
Loudspeaker	built-in, adjustable
AF out	
Connector	3.5 mm mini jack
Output impedance	10 Ω
Open-circuit voltage	up to 1.5 V, adjustable

## R&S®FPL1-B9 internal generator

Frequency		
Frequency range	R&S®FPL1003	5 kHz to 3 GHz
	R&S®FPL1007	5 kHz to 7.5 GHz
Setting resolution	independent CW source	0.01 Hz


Frequency offset	
Setting range	0 Hz to f <sub>max</sub> <sup>8</sup>
Setting resolution	0.01 Hz


Spectral purity			
SSB phase noise	frequency = 1 GHz, output level = 0 dBr	frequency = 1 GHz, output level = 0 dBm	
	carrier offset = 10 kHz	< -102 dBc (1 Hz), typ108 dBc (1 Hz)	
	carrier offset = 100 kHz	< -105 dBc (1 Hz), typ111 dBc (1 Hz)	
	carrier offset = 1 MHz	< -117 dB (1 Hz), typ130 dBc (1 Hz)	
Harmonics	output level = 0 dBm	output level = 0 dBm	
	5 kHz ≤ f < 100 kHz	< -30 dBc (nom.)	
	100 kHz ≤ f ≤ 7.5 GHz <sup>9</sup>	< -30 dBc	
Non-harmonic spurious	output level = 0 dBm		
	1 kHz < offset from carrier ≤ 4 MHz	-35 dBc (nom.)	
	offset from carrier > 4 MHz	< -35 dBc, -45 dBc (typ.)	

Level		
Specified level range		-50 dBm to 0 dBm
Setting resolution		0.1 dB
Setting range		-60 dBm to +10 dBm
Absolute level uncertainty	frequency = 50 MHz, +20 °C to +30 °C, output level = -10 dBm, frequency offset = 0 Hz	< 0.5 dB
Frequency response	output level = -10 dBm, referenced to level at 50 MHz, +20 °C to +30 °C, frequency offset = 0 Hz	
	100 kHz ≤ f ≤ 3 GHz	< 1 dB,
	3 GHz < f ≤ 7.5 GHz	< 1.5 dB, < 1 dB (typ.)
Level nonlinearity	for specified level range, referenced to -10 dBm output level, +20 °C to +30 °C, f ≥ 100 kHz	≤ 2 dB, < 0.5 dB (typ.)


 $<sup>^{8} \ \</sup> f_{\text{max}}$  depends on frequency range.


<sup>&</sup>lt;sup>9</sup> Limit is nominal for harmonics at frequencies > 20 GHz.

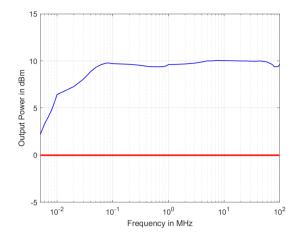

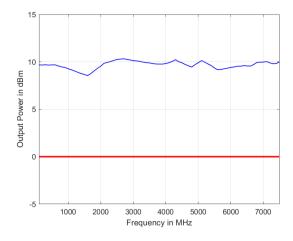

Maximum output power versus frequency, level in dBm (meas.).

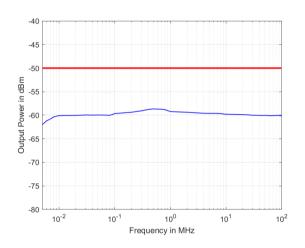

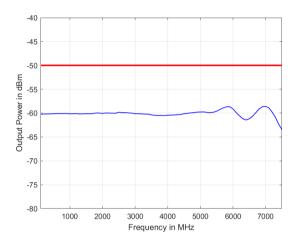

Minimum output power versus frequency, level in dBm (meas.).

Dynamic range	RBW = 1 kHz, f = 1 GHz	115 dB (nom.)
Power sweep		
Specified level range		-50 dBm to 0 dBm
Setting resolution		0.1 dB
Setting range		-60 dBm to +10 dBm
GEN output		
Connector		N female, 50 Ω
VSWR		1.5 (nom.)
Reverse power		
DC voltage		50 V
CW RF power		30 dBm (= 1 W)
Max. pulse voltage		150 V
Maximum pulse energy (10 µs)		1 mWs

## R&S®FPL1-B30 DC power input 12 V/24 V

Input voltage range	DC	12 V to 24 V (nom.),
		10.4 V to 28 V,
		switch-on voltage > 11 V (meas.)
Input current	$V_{in} = 12 \text{ V}/24 \text{ V}$	13 A/6.5 A (nom.)
	$V_{in} = 12 \text{ V}/24 \text{ V}$ , operating mode, without	5.5 A/2.7 A (meas.)
	internal batteries (R&S®FPL1-B31)	
	V <sub>in</sub> = 12 V/24 V, operating mode, internal	11 A/5 A (meas.)
	batteries in charge mode	
	$V_{in} = 12 \text{ V}/24 \text{ V}$ , instrument standby mode,	6.5 A/3 A (meas.)
	internal batteries in charge mode	
Temperature	operating temperature range	0 °C to +40 °C
	storage temperature range	−20 °C to +70 °C

## R&S®FPL1-B31 internal lithium-ion battery

Operating time		3.5 h (nom.)
Charge time	standby mode, AC supply	< 2 h (nom.)
	standby mode, external DC supply (R&S®FPL1-B30)	< 2 h (nom.)
	operating mode	< 4 h (nom.)
Temperature	operating temperature range, discharge	0 °C to +50 °C
	operating temperature range, charge	0 °C to + 45 °C
	storage temperature range	-20 °C to +60 °C <sup>10</sup>

## R&S®FSV-B34 charger (only needed for charging spare batteries)

AC input voltage range		100 V to 240 V, ±10 % (nom.)
AC supply frequency		50 Hz to 60 Hz (nom.)
Power consumption		max. 300 W (nom.)
Number of charger bays		4
Dimensions	$W \times H \times D$	400 mm × 127 mm × 203 mm
		$(15.75 \text{ in } \times 5 \text{ in } \times 8 \text{ in})$
Net weight		3.1 kg (6.9 lb)

The battery packs should be stored in an environment with low humidity, free from corrosive gas at a recommended temperature range < +21 °C. Extended exposure to temperatures above +45°C could degrade battery performance and life.</p>

## **Ordering information**

Designation	Type	Order No.
Signal and spectrum analyzer	R&S®FPL1003	1304.0004.03
Signal and spectrum analyzer	R&S®FPL1007	1304.0004.07
Accessories supplied		
Power cable and quick start guide		

## **Options**

Designation	Туре	Order No.	Retrofittable	Remarks
OCXO reference frequency	R&S®FPL1-B4	1323.1902.02	yes	retrofit in service center
Additional interfaces	R&S®FPL1-B5	1323.1883.02	yes	user-retrofittable
				IF/video/demod out, user port,
				noise source control, power
				sensor, AF output, loudspeaker
Internal generator	R&S®FPL1-B9	1323.1925.03	no	for R&S®FPL1003
Internal generator	R&S®FPL1-B9	1323.1925.07	no	for R&S®FPL1007
GPIB interface	R&S®FPL1-B10	1323.1890.02	yes	user-retrofittable
Second hard disk (SSD)	R&S®FPL1-B19	1304.0427.02	yes	user-retrofittable mounted on PC board, including analyzer firmware
RF preamplifier (3 GHz/7.5 GHz)	R&S®FPL1-B22	1323.1719.02	yes	user-retrofittable
1 dB steps for electronic attenuator	R&S®FPL1-B25	1323.1990.02	yes	user-retrofittable
DC power supply 12 V/24 V	R&S®FPL1-B30	1323.1877.02	yes	user-retrofittable
Internal lithium-ion battery	R&S®FPL1-B31	1323.1725.02	yes	retrofit in service center; including 2 battery packs and internal charging unit
40 MHz analysis bandwidth	R&S®FPL1-B40	1323.1931.02	yes	user-retrofittable
Firmware	'		1	
AM/FM/PM measurement demodulator	R&S®FPL1-K7	1323.1731.02		
Power sensor measurement with	R&S®FPL1-K9	1323.1754.02		supports R&S®NRPxx power
R&S®NRPxx power sensors				sensors
Noise figure and gain measurements	R&S®FPL1-K30	1323.1760.02		requires R&S®FPL1-B5
Phase noise measurement application	R&S®FPL1-K40	1323.1831.02		
EMI measurement application	R&S®FPL1-K54	1323.1783.02		
Vector signal analysis	R&S®FPL1-K70	1323.1748.02		
Multi-modulation analysis	R&S®FPL1-K70M	1323.1625.02		requires R&S®FPL1-K70
BER measurements with PRBS data	R&S®FPL1-K70P	1323.1631.02		requires R&S®FPL1-K70
Software				
License dongle	R&S®FSPC	1310.0002.03		
Vector signal explorer base software	R&S®VSE	1320.7500.06		
Vector signal analysis	R&S®VSE-K70	1320.7522.06		
EUTRA/LTE NB-IoT	R&S®VSE-K106	1320.7900.06		

### **Recommended extras**

Designation	Туре	Order No.
Protective hard cover	R&S®FPL1-Z1	1323.1960.02
Soft carrying bag for transport and outdoor operation	R&S®FPL1-Z2	1323.1977.02
H-style shoulder harness (requires R&S®FPL1-Z2 option)	R&S®FPL1-Z3	1323.1683.02
Spare lithium-ion battery pack	R&S®FPL1-Z4	1323.1677.02
Anti-glare display film for outdoor operation	R&S®FPL1-Z5	1323.1690.02
Lithium-ion battery charger for charging spare batteries	R&S®FSV-B34	1321.3950.02
19" rackmount kit	R&S®FPL1-Z6	1323.1954.02
Headphones		0708.9010.00
UWB antenna module (30 MHz to 6 GHz)	R&S®HE400UWB	4104.6900.02
Matching pads, 50 Ω/75 Ω		
L section, matching at both ends	R&S®RAM	0358.5414.02
Series resistor, 25 Ω, matching at one end	R&S®RAZ	0358.5714.02
(taken into account in instrument function RF INPUT 75 Ω)		
Smart noise sources for noise figure and gain measurements	(R&S®FPL1-K30 required)	
Smart noise source 10 MHz to 18 GHz	R&S®FS-SNS18	1338.8008.18
Smart noise source 10 MHz to 26.5 GHz	R&S®FS-SNS26	1338.8008.26

Designation	Туре	Order No.
High-power attenuators		·
Attenuator 100 W, 3/6/10/20/30 dB, 1 GHz	R&S®RBU100	1073.8495.xx (xx = 03/06/10/20/30)
Attenuator 50 W, 3/6/10/20/30 dB, 2 GHz	R&S®RBU50	1073.8695.xx (xx = 03/06/10/20/30)
Attenuator 50 W, 20 dB, 6 GHz	R&S®RDL50	1035.1700.52
Connectors and cables		·
IEC/IEEE bus cable, length: 1 m	R&S®PCK	0292.2013.10
IEC/IEEE bus cable, length: 2 m	R&S®PCK	0292.2013.20
DC block		
DC block, 10 kHz to 18 GHz (type N)	R&S®FSE-Z4	1084.7443.02

## Power sensors supported by the R&S®FPL1-K9 option <sup>11</sup>

Designation	Туре	Order No.
Universal power sensors		
10 MHz to 8 GHz, 100 mW, two-path	R&S®NRP-Z211	1417.0409.02
10 MHz to 8 GHz, 200 mW <sup>12</sup>	R&S <sup>®</sup> NRP-Z11	1138.3004.02
10 MHz to 18 GHz, 100 mW, two-path	R&S®NRP-Z221	1417.0309.02
10 MHz to 18 GHz, 200 mW <sup>12</sup>	R&S®NRP-Z21	1137.6000.02
10 MHz to 18 GHz, 2 W <sup>12</sup>	R&S®NRP-Z22	1137.7506.02
10 MHz to 18 GHz, 15 W <sup>12</sup>	R&S <sup>®</sup> NRP-Z23	1137.8002.02
10 MHz to 18 GHz, 30 W <sup>12</sup>	R&S®NRP-Z24	1137.8502.02
Power sensor modules with power splitter		
DC to 18 GHz, 500 mW	R&S®NRP-Z27	1169.4102.02
DC to 26.5 GHz, 500 mW	R&S®NRP-Z37	1169.3206.02
Thermal power sensors		
0 Hz to 18 GHz, 100 mW	R&S®NRP18T	1424.6115.02
0 Hz to 18 GHz, 100 mW	R&S®NRP18TN	1424.6121.02
0 Hz to 33 GHz, 100 mW	R&S®NRP33T	1424.6138.02
0 Hz to 33 GHz, 100 mW	R&S®NRP33TN	1424.6144.02
0 Hz to 40 GHz, 100 mW	R&S®NRP40T	1424.6150.02
0 Hz to 40 GHz, 100 mW	R&S®NRP40TN	1424.6167.02
0 Hz to 50 GHz, 100 mW	R&S®NRP50T	1424.6173.02
0 Hz to 50 GHz, 100 mW	R&S®NRP50TN	1424.6180.02
0 Hz to 67 GHz, 100 mW	R&S®NRP67T	1424.6196.02
0 Hz to 67 GHz, 100 mW	R&S®NRP67TN	1424.6209.02
0 Hz to 110 GHz, 100 mW	R&S®NRP110T	1424.6215.02
Average power sensors		
8 kHz to 6 GHz, 200 mW	R&S®NRP6A	1424.6796.02
8 kHz to 6 GHz, 200 mW	R&S®NRP6AN	1424.6809.02
9 kHz to 6 GHz, 200 mW <sup>12</sup>	R&S®NRP-Z91	1168.8004.02
8 kHz to 18 GHz, 200 mW	R&S®NRP18A	1424.6815.02
8 kHz to 18 GHz, 200 mW	R&S®NRP18AN	1424.6821.02
Three-path diode power sensors		
100 pW to 200 mW, 10 MHz to 8 GHz	R&S®NRP8S	1419.0006.02
100 pW to 200 mW, 10 MHz to 8 GHz, LAN version	R&S®NRP8SN	1419.0012.02
100 pW to 200 mW, 10 MHz to 18 GHz	R&S®NRP18S	1419.0029.02
100 pW to 200 mW, 10 MHz to 18 GHz, LAN version	R&S®NRP18SN	1419.0035.02
1 nW to 2 W, 10 MHz to 18 GHz	R&S®NRP18S-10	1424.6721.02
10 nW to 15 W, 10 MHz to 18 GHz	R&S®NRP18S-20	1424.6738.02
30 nW to 30 W, 10 MHz to 18 GHz	R&S®NRP18S-25	1424.6744.02
100 pW to 200 mW, 10 MHz to 33 GHz	R&S®NRP33S	1419.0064.02
100 pW to 200 mW, 10 MHz to 33 GHz, LAN version	R&S®NRP33SN	1419.0070.02
100 pW to 200 mW, 10 MHz to 33 GHz, LAN version,	R&S®NRP33SN-V	1419.0129.02
TVAC-compliant		
100 pW to 100 mW, 50 MHz to 40 GHz	R&S®NRP40S	1419.0041.02
100 pW to 100 mW, 50 MHz to 40 GHz, LAN version	R&S®NRP40SN	1419.0058.02
100 pW to 100 mW, 50 MHz to 50 GHz	R&S®NRP50S	1419.0087.02
100 pW to 100 mW, 50 MHz to 50 GHz, LAN version	R&S®NRP50SN	1419.0093.02

 $<sup>^{\</sup>rm 11}\,$  For average power measurement only. LAN connection not supported.

<sup>&</sup>lt;sup>12</sup> Product discontinued.

Wideband power sensors		
50 MHz to 18 GHz, 100 mW	R&S®NRP-Z81	1137.9009.02
50 MHz to 40 GHz, 100 mW (2.92 mm)	R&S®NRP-Z85	1411.7501.02
50 MHz to 40 GHz, 100 mW (2.40 mm)	R&S®NRP-Z86	1417.0109.40
50 MHz to 44 GHz, 100 mW (2.40 mm)	R&S®NRP-Z86	1417.0109.44

Warranty		
Base unit		3 years
All other items <sup>13</sup>		1 year
Options		
Extended warranty, one year	R&S®WE1	Please contact your local
Extended warranty, two years R&S®WE2		Rohde & Schwarz sales office.
Extended warranty with calibration coverage, one year	R&S®CW1	
Extended warranty with calibration coverage, two years	R&S®CW2	
Extended warranty with accredited calibration coverage,	R&S®AW1	
one year		
Extended warranty with accredited calibration coverage,	R&S®AW2	
two years		

### Extended warranty with a term of one to two years (WE1 and WE2)

Repairs carried out during the contract term are free of charge <sup>14</sup>. Necessary calibration and adjustments carried out during repairs are also covered. Simply contact the forwarding agent we name; your product will be picked up free of charge and returned to you in top condition a couple of days later.

#### Extended warranty with calibration (CW1 and CW2)

Enhance your extended warranty by adding calibration coverage at a package price. This package ensures that your Rohde & Schwarz product is regularly calibrated, inspected and maintained during the term of the contract. It includes all repairs <sup>14</sup> and calibration at the recommended intervals as well as any calibration carried out during repairs or option upgrades.

#### Extended warranty with accredited calibration (AW1 and AW2)

Enhance your extended warranty by adding accredited calibration coverage at a package price. This package ensures that your Rohde & Schwarz product is regularly calibrated under accreditation, inspected and maintained during the term of the contract. It includes all repairs <sup>14</sup> and accredited calibration at the recommended intervals as well as any accredited calibration carried out during repairs or option upgrades.

<sup>13</sup> For options that are installed, the remaining base unit warranty applies if longer than 1 year. Exception: all batteries have a 1 year warranty.

<sup>14</sup> Excluding defects caused by incorrect operation or handling and force majeure. Wear-and-tear parts are not included.

Version 08.00, October 2020

### Service that adds value

- ➤ Worldwide

- Local und personalized
   Customized and flexible
   Uncompromising quality
   Long-term dependability

#### Rohde & Schwarz

The Rohde & Schwarz electronics group offers innovative solutions in the following business fields: test and measurement, broadcast and media, secure communications, cybersecurity, monitoring and network testing. Founded more than 80 years ago, the independent company which is headquartered in Munich, Germany, has an extensive sales and service network with locations in more than 70 countries.

www.rohde-schwarz.com

### Sustainable product design

- ► Environmental compatibility and eco-footprint
- ► Energy efficiency and low emissions
- ► Longevity and optimized total cost of ownership

Certified Quality Management ISO 9001

### Rohde & Schwarz training

www.training.rohde-schwarz.com

### Rohde & Schwarz customer support

www.rohde-schwarz.com/support



