


105U-2, 105S-2

Installation Guide

Statutory Requirements

EC: Unlicensed operation limits the radio power. High gain aerials may only be used to compensate for cable losses.

Aerial Installation

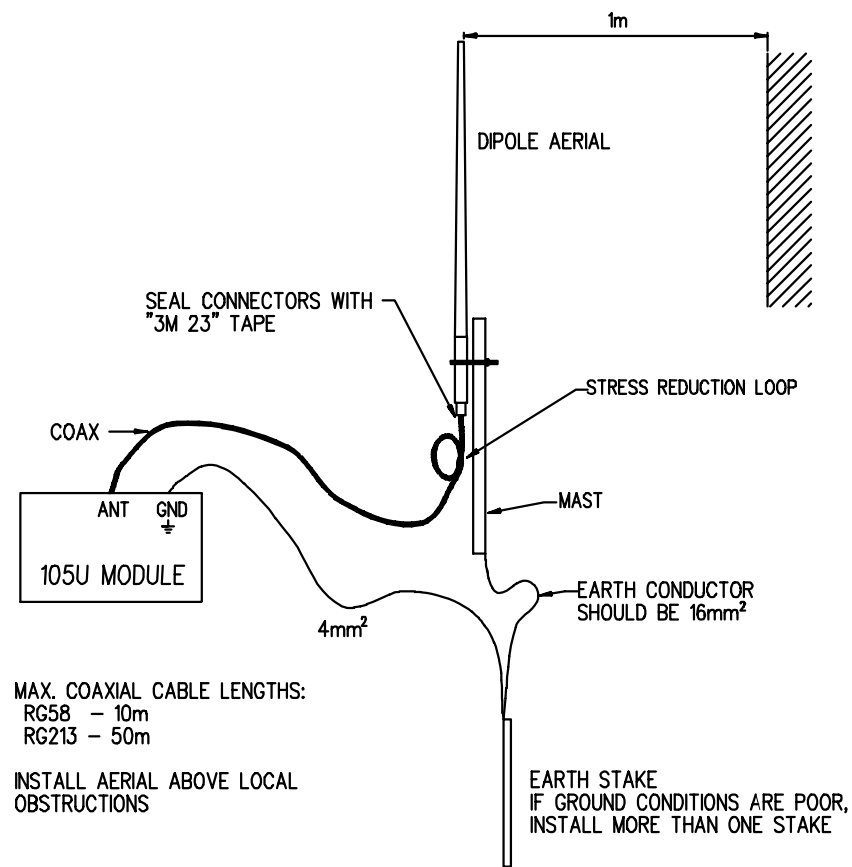

105-2 I/O Installation

- Power supply may be:
- (A) 12-24VAC
 - (B) 15-30VDC
 - (C) Supply battery or 11-15 VDC
 - (D) Solar panel with solar battery

Choose option and wire as shown

11-15VDC Supply or
Optional 12V Backup
Battery
to 12 Amphour for AC/DC
to 100 Amphour for Solar

Digital Output
Max 30VDC, 500mA
DC Relay Supply

