





NEW

Electrical Safety Multi-analyzer TOS9300 Series

All-in-one safety tester model (TOS9303LC)

Insulation diagnosis available with partial discharge model (TOS9301PD (Under development))

New amplifier type allows for 40 A AC/DC ground bond testing (Ground bond tester models)

Electrical breakdown inspection setting available

AC5 kV/100 mA, DC7.2 kV/100 W Hipot test

Touch current/protective conductor current/leakage current test (TOS9303LC)

LAN/USB/RS232C standard digital interface

Easy to read LCD display for real time monitoring during tests

All measurement values and standard outlines displayed in each test

High voltage scanner capable of output distribution both standalone and when connected with existing withstanding voltage/insulation resistance testing equipment models [TOS5300 series, etc.] (TOS9320)

THE ALL-ROUN

Hipot, Insulation Resistance, Ground Bond, Leakage or Partial Discharge, this analyzer covers it all!

TOS9300 Series Lineup


T0S9300


AC Hipot Tester with Insulation Resistance Test

ACW 5 kV/100 mA(500 VA)

IR 0.001 M Ω to 100.0 G Ω (DC-25 V to -1000 V)









- D 430(16.93")(440(17.32"))W×132(5.2")(155(6.10"))H× 370(14.57")(410(16.14"))Dmm(inch)
- W Approx.17 kg(37.5 lbs)

T0S9302

AC Hipot Tester with Ground Bond Test

ACW 5 kV/100 mA(500 VA) \blacksquare 0.001 Ω to 0.600 Ω (3.0 A to 42.0 A)





- D 430(16.93")(440(17.32"))W×132(5.2")(155(6.10"))H× 500(19.69")(540(21.26"))Dmm(inch)
- W Approx.20 kg(44.1 lbs)

T0S9301

AC/DC Hipot Tester with Insulation Resistance Test

ACW 5 kV/100 mA(500 VA)

DCW 5 kV/20 mA, 7.2 kV/13.9 mA(100 W)

0.001 M Ω to 100.0 G Ω (DC-25 V to -1000 V/DC+50 V to +7200 V) LAN USB RS232C (Timer)



- D 430(16.93")(440(17.32"))W×132(5.2")(155(6.10"))H× 370(14.57")(410(16.14"))Dmm(inch)
- W Approx.18 kg (39.7 lbs)

T0S9303

AC/DC Hipot Tester with Insulation **Resistance and Ground Bond Test**

ACW 5 kV/100 mA(500 VA)

5 kV/20 mA. 7.2 kV/13.9 mA(100 W)

IR 0.001 M Ω to 100.0 G Ω (DC-25 V to -1000 V/DC+50 V to +7200 V)

 $0.001~\Omega$ to $0.600~\Omega$ (3.0 A to 42.0 A) LAN USB (RS232C) (Timer



- D 430(16.93")(440(17.32"))W×132(5.2")(155(6.10"))H× 500(19.69")(540(21.26"))Dmm(inch)
- W Approx.21 kg(46.3 lbs)

TOS9301PD

development

AC/DC Hipot Tester with Insulation Resistance and Partial Discharge Test

ACW 5 kV/100 mA(500 VA)

5 kV/20 mA, 7.2 kV/13.9 mA(100 W)

IR 0.001 M Ω to 100.0 G Ω (DC-25 V to -1000 V/DC+50 V to +7200 V)





- D 430(16.93")(440(17.32"))W×132(5.2")(155(6.10"))H× 500(19.69")(540(21.26"))Dmm(inch)
- W Approx.24 kg (52.9 lbs)

TOS9303LC

AC/DC Hipot Tester with Insulation Resistance. Ground Bond, and Leakage Current Test

ACW 5 kV/100 mA(500 VA)

5 kV/20 mA. 7.2k V/13.9 mA(100 W)

IR 0.001 M Ω to 100.0 G Ω (DC-25 V to -1000 V/DC+50 V to +7200 V)

 $0.001~\Omega$ to $0.600~\Omega$ (3.0 A to 42.0 A)

1 µA to 100 mA(rms)







- D 430(16.93")(440(17.32"))W×132(5.2")(155(6.10"))H× 500(19.69")(550(21.65"))Dmm(inch)
- W Approx.22 kg(48.5 lbs)

Test items

Model	AC Withstanding Voltage (AC Hipot)	DC Withstanding Voltage (DC Hipot)	Insulation Resistance	Earth Continuity (Ground Bond)	Leakage Current	Partial Discharge
T0S9300	•		•			
T0S9301	•	•	•			
TOS9301PD Under development	•	•	•			•
T0S9302	•			•		
T0S9303	•	•	•	•		
TOS9303LC	•	•	•	•	•	
T0S9320	4 chann	el high voltage sc	anner with conta	ct check function	can be used star	ndalone.



Electrical Safety Multi-analyzer TOS9300 Series NEW

The TOS9300 series is a high performance electrical safety analyzer that complies to a wide range of universal standards. Hipot, Insulation Resistance, Ground Bond, Leakage Current (touch current and protective conductor current) and partial discharge can all be tested. A total of 6 models are available for standard compliance tests in a wide variety of applications including R&D, quality assurance manufacturing lines and laboratory tests.

- All-in-one safety tester model (TOS9303LC)
- Insulation diagnosis available with partial discharge model (TOS9301PD [Under development])
- New amplifier type allows for 40A AC/DC ground bond testing (Ground bond tester models)
- Electrical breakdown inspection setting available
- AC5 kV/100 mA, DC7.2 kV/100 W Hipot test
- Touch current/protective conductor current/leakage current testing (TOS9303LC)
- LAN/USB/RS232C standard digital interface
- Easy to read LCD display for real time monitoring during tests,
 All measurement values and standard outlines displayed in each test
- High voltage scanner capable of output distribution both standalone and when connected with existing withstanding voltage/insulation resistance testing equipment models [TOS5300 series, etc.] (TOS9320)

Option TOS9320 **Others Features High-voltage Scanner** Remote Control Box High voltage scanner for TOS9300 series High voltage test probe multi-channel testing systems Test probe for touch current test **Applications Warning Light Unit Multi Outlet** DIN conversion cable **Rack Mount Bracket** p10-11 **Exterior Design** D 430(16.93")(440(17.32"))W×88(3.46")(105(4.13"))H× 370(14.57")(390(15.35"))Dmm(inch) W Approx.8 kg (17.6 lbs) P12-P24 **Specifications** Max. output-voltage of AC hipot testing D Dimensions(maximum) Equipped with rise time control function Max. output-voltage of DC hipot testing Weight P25 Dimensions Equipped with fall time control function Measurement range of insulation resistance testing Measurement range of ground bond testing LAN Equipped with LAN interface as standard **Equipped with timer function** Measurement range of leakage current testing USB Equipped with USB interface as standard Option/Other P26-P27 RS232C Equipped with RS232C interface as standard Measurement range of partial discharge testing


The Electrical Appliance & Material Safety Low (Japan), UL (U.S.A.), CSA (Canada), VDE (Germany) and BS (U.K) are some major examples of safety standards in use throughout the world that require the perform-ing of hipot testing. For this reason, it is necessary to confirm for what portion of what standard testing is to be performed when purchasing a hipot tester. Although the 500 VA capacity hipot testers available from KIKUSUI can basically be applied to tests specified in all safety stand-ards, we recommend that you consult with us prior to purchase in order to select the model that best matches your specific application.

For the withstanding test and the insulation resistance test of the EUT (Equipment Under Test) with turned on electricity.

Features

Color LCD Screen for Improved Visibility!

A brand-new 7-inch LCD display allows for easy access to your custom settings, standard outlines and blueprints for easy operation. (See Exterior Design P10/Display P11)

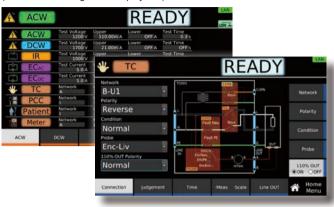

User-Friendly 10Key Configuration

The TOS9300 series has included a user-friendly keypad in addition to the basic rotary knob for easy setting configuration. The front panel USB interface also allows for direct control via keyboard*.





*106/109 Japanese keyboards and 101/104 English keyboard compliant

Easy Firmware Updates via USB

System firmware can easily be updated via USB memory with update files directly accessible from our website. (https://www.kikusui.co.jp/en/download/)





LAN/USB/RS232C Standard Digital Interface

LXI compatible LAN, USB 2.0, USB-TMC compatible USB, and RS232C as standard digital interface.



* Connecting with a smartphone, tablet, etc. requires a Wi-Fi environment (wireless LAN router etc.).



▲Rear panel•Interface(All models)

 Use a browser from a PC, smartphone, or tablet to access the web server built into the TOS9300 series for convenient control and monitoring.

[Recommended browser]

- Requires for the Internet Explorer version 9.0 or later
- Requires for the firefox 8.0 or later
 Requires for the safari / mobile Safari 5.1 or later
- Requires for the Chrome 15.0 or later
 Requires for the Opera 11.0 or later

I/V Monitor Terminal (Analog Monitor)

Signal outputs on the rear panel I/V terminal allow the user to monitor current/voltage waveforms during hipot tests with only an oscilloscope. Current sensors and high voltage probes not required.



Can connect with an oscilloscope using a BNC cable.
*There is no BNC cable option available. Users need to acquire a BNC cable themselves.

STATUS OUT Connector

Signals from the rear panel STATUS connector automatically activate the optional warning light (PL02-TOS) during high voltage output or unsafe test conditions.






SIGNAL I/O Connector

The rear panel also has a SIGNAL I/O that can start/stop operation as well as output signals.

TOS9300 example (The SIGNAL I/O connector is the same on all models.)



Pin no.	IN/OUT	Signal name	Description
1	IN	INTERLOCK+	Activate/release interlock.
2	_	COM	Circuit common (chassis potential) shared by input and output.
3	IN	PM0	
4	IN	PM1	
5	IN	PM2	
6	IN	PM3	Select setup memories and auto test program memories.
7	IN	PM4	Select setup memories and auto test program memories.
8	IN	PM5	
9	IN	PM6	
10	IN	PM7	
11	IN	STB	Recall setup memories and programs selected with the PM0 to PM7 signals.
12	_	Reserved	
13	_	Reserved	Not used.
14	_	Reserved	
15	IN	START	Start a test.
16	IN	STOP	Stop a test.
17	IN	ENABLE	Enable the START signal.
18	_	COM	I/O circuit common (chassis potential).
19	IN	INTERLOCK-	Activate/release interlock.
20	_	COM	I/O circuit common (chassis potential).
21	_	+24V	+24 V internal power supply output terminal. Maximum output current 100 mA.
22	OUT	H.V ON/LINE ON	Set to on in any of the following conditions. Testing. Auto testing. Voltage remaining across the output terminals. Power being supplied to the EUT from the TOS9303LC through AC LINE OUT.
23	OUT	RISE	Set to on when the voltage is rising.
24	OUT	TEST	Set to on during test time.
25	OUT	PASS	Set to on for the duration of time specified by Pass Hold when a PASS judgment is made.
26	OUT	U FAIL	Set to on continuously when a U-FAIL judgment is made. Or set to on continuously along with the L FAIL signal when CONTACT FAIL judgment is made when a scanner is connected.
27	OUT	L FAIL	Set to on continuously when an L-FAIL judgment is made. Or set to on continuously along with the U FAIL signal when CONTACT FAIL judgment is made when a scanner is connected.
28		Reserved	Not used.
29	OUT	READY	Set to on when the product is ready to start a test.
30	OUT	PROTECTION	Set to on when a protection function is activated.
31	OUT	STEP END	Set to on when each step ends during an auto test.
32	OUT	CYCLE END	Set to on when the last step ends during an auto test.
33	OUT	ACW	Set to on when the test mode is set to AC withstanding voltage test.
34	OUT	DCW	Set to on when the test mode is set to DC withstanding voltage test.
35	OUT	IR	Set to on when the test mode is set to insulation resistance test.
36	OUT	EC	Set to on when the test mode is set to earth continuity test.
37	OUT	LC	Set to on when the test mode is set to touch current test or protective conductor test.



Universal Input Support

Global Support

300 V


TOS9300 Series supports universal input for varying input voltages around the world.

 Programmable Output Frequency Stable output frequency not dependent on input power source. Testing voltage is supplied at a stable 50/60Hz frequency.



AC Hipot Testing with Stable Output [Input Voltage Variation: ±0.3%]

Conventional hipot testers utilize a slide transformer to output AC line voltage. This design is susceptible to input voltage fluctuation, with outside electrical influence affecting the test results. This can result in distorted voltage being applied to the EUT which can cause product malfunctions down the line due to component malfunction. The TOS9300 series utilizes a highly efficient PWM amplifier capable of stable high-voltage output that is unaffected by changes in the AC power line. The TOS9300 series allows for safe, stable, and highly reliable tests regardless of AC power line instability.

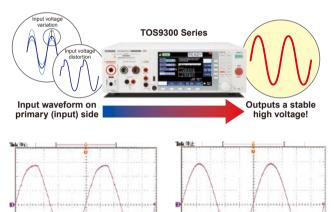

High Precision/High Resolution/High Speed

B 49.80 %

Slide transformer system

The TOS9300 is equipped with a highly accurate, high resolution RMS measurement circuit with a voltmeter of \pm (1.2% of reading +5 V)/minimum resolution 0.1 V and an ammeter of \pm (1% of reading +2 μ A)/ minimum resolution 1 μ A. The series also supports an auto range function, ensuring similar accuracy in both the upper and lower limit measurements that can accurately detect connection problems in the test lead. This combined with a measurement speed of 0.1s allows for reliable testing with high accuracy and resolution.

PWM amplifier system

Automatic Testing Feature

Tests can be combined and configured to execute automatically over long periods of time. Automotic tests are composed of programs and steps, which can be configured to initiate one after another.

Program schematic

Step 1	Step 2	Step 3
ACW test	DCW test	IR test
	l Program	


П	υg	ıaı	П

	Maximum number of programs	Maximum number of steps *1	Executed under external control	Changing the program name
Program memory (except LC tests)	100	100	-	✓
Program memory (LC tests only) *2	100	100	-	✓
	M	Maniana anaka	Executed under	Observing the
	of programs	Maximum number of steps *1	external control	Changing the program name
External control program memory (except LC tests)	25	100	✓	-
External control Program memory (LC tests only) *2	25	100	✓	-

^{*1} Per program *2 TOS9303LC only

Contact/Protective Conductor/ Patient Leakage Current Test (TOS9303LC)

The TOS9300 series can conduct leakage current (patient current) tests for highly sensitive medical devices. Measurement networks can be easily configured via the front panel. (See Applications P8, Specifications P19)

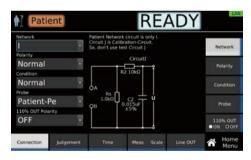

All Electrical Safety Standard Tests in One Device! (TOS9303LC)

The TOS9303LC is the "all-rounder" model which supports AC/DC withstanding voltage, insulation resistance, AC/DC earth continuity and leakage currents tests in a single device. It can also be used for contact current, protective conductor current and patient leakage current tests.

 ACW
 5 kV/100 mA(500 VA)

 DCW
 5 kV/20 mA, 7.2 kV/13.9 mA(100 W)

 IR
 0.001 MΩ to 100.0 GΩ (DC-25 V to -1000 V/DC+50 V to +7200 V)

 EC
 0.001 Ω to 0.600 Ω (3.0 A to 42.0 A)

 LC
 1 μA to 100 mA(rms)



Features

Programmable Detection Response Speed

Conventional withstanding voltage testers are generally used to only detect insulation breakdown, and cannot make judgements on instantaneous discharge currents like partial discharge. However, the TOS9300 series is equipped with 5 levels of response speed settings to accurately detect low levels of insulation breakdown. Small discharges not visible to conventional withstanding voltage testers are easily detected with the TOS9300 series.

Value		Description
LPF	Slow	Mean-value response type current detector. This is similar to the current detection response of Kikusui's general-purpose AC withstanding voltage testers. This setting is suitable for detecting dielectric breakdown defined in safety standards and for general hipot tests for general electronic devices and components. This setting is not recommended for detecting corona discharge, which is not considered dielectric breakdown by typical safety standards.
	Medium	
	Fast	judgement detection is much faster, suitable for withstanding voltage tests on compact electronic components and other EUTs prone to dielectric breakdown. Instantaneous discharges such as corona discharges with high frequencies are detected which may not be suitable for simple withstanding voltage tests.
HPF	Slow	Extremely small discharges such as corona discharges are detected but
	Fast	with low reproductibility.



7.2 kV/100 W DC Hipot Test

Capable of performing DC Hipot tests up to 7.2 kV utilizing a stable DC/DC converter with low-ripple and load variation of 1% and below.



Positive Electrode/Negative Electrode Insulation Resistance Testing

Testing voltage from -25 V to -1000 V, +50 V to +7200 V, with a setting resolution is 1 V. Insulation resistance can be tested up to 99.99 G Ω . This makes for easy IEC61730-2 standard PV (solar battery) module insulation resistance testing. (See Application P9)



Electric Discharge Function

A discharge feature enables discharge of electrical energy from the DUT after DC hipot and insulation resistance tests have completed. The setting range for discharge time is between 0.0s - 100.0s.


AC/DC Earth Continuity Testing up to 40 A

Cutting edge amp technology allows for a wide range of applications, including general AC earth conduction testing and EV/PHV system DC earth continuity testing. This also allows for strict adherence to automotive DC standard requirements; expected to increase in the near future.



EARTH FAULT Protection

Mistakenly changing the grounding (GND) setting to "guard" (floating) can result in grounding the test subject which can result in unwanted leakage current emissions from the high voltage output site into the grounding site, resulting in electric shock to the operator. The EARTH FAULT protection function blocks output and terminates the test; eliminating any risk of electric shock and maximizing safety for the operator.

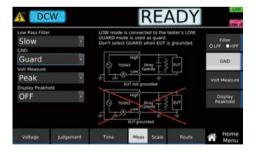

Offset Cancel


The Offset Cancel feature allows the user to eliminate electrical current found in the insulation resistance and stray capacitance among the output cables (only resistance for DC testing). This feature is available in all testing modes for AC withstanding voltage, DC withstanding voltage, insulation resistance, earth continuity and electrical current leakage tests.



Rise Time/Fall Time Control Function


The rise time control function prevents unnecessary stress from being applied to the EUT.

Rise Time control function

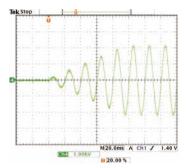

The rise time control feature allows you to gradually increase voltage to a set value while AC/DC hipot tests are conducted. Voltage rise times can be set from 0.1s to 200.0s at a resolution of 0.1s.


Fall time control function

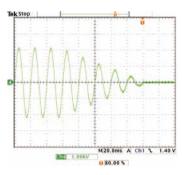

The fall time control feature allows you to gradually decrease the test voltage after a successful AC/DC hipot test. The voltage fall time can be set from 0s to 200s at a resolution of 0.1s. (OFF is also selectable).

Basic Memory Function

In addition to automatic testing memory functions, up to 51 basic setting conditions and testing modes can be selected and saved to the main unit or USB memory. Easy testing with no hassle!

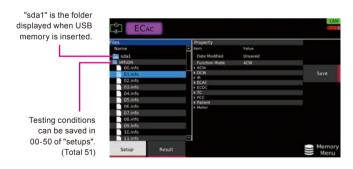

Calibration Deadline Notification

A real-time clock IC has been equipped to ensure that the instrument is traceable via regular calibration. The device will automatically generate warning notifications when the calibration deadline is exceeded.

Multi-Channel Testing System (Option)


The TOS9320 high voltage scanner allows for rapid distribution of testing voltage from the main unit to multiple testing points for withstanding voltange and insulation resistance testing. Channels can be controlled via an external device through the rear panel CONTROLLER INTERFACE connector. The scanner can also be used standalone or with an external control device for other Kikusui withstanding voltage and insulation resistance testing instruments. Hipot tests for electronic devices with multiple testing points have never been easier. (See Application P9)

[High-voltage scanner TOS9320]



- Output can be expanded to four channels with one high-voltage scanner. The electric potential of each channel can be arbitrarily set to high, low, or open, and can be tested at any of these four points.
- Up to four high voltage scanners (total 16 channels) can be connected to each unit.
- Output of each channel and contact with testing points can be easily monitored.




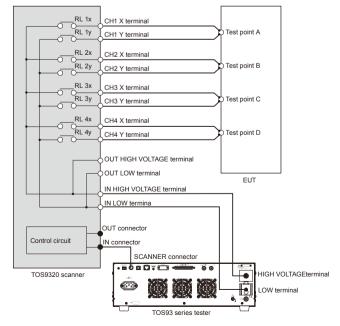

Application

Leakage Current Test

Compatible with medical device leakage current testing (patient current)! (TOS9303LC only)

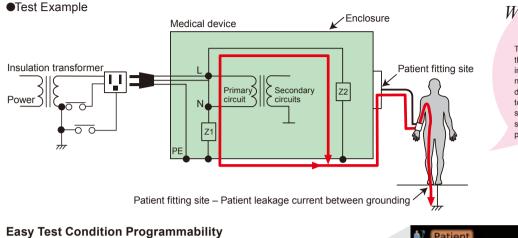


What is patient leakage current testing?

This test measures current flowing from the point of contact between a medical instrument and a simulated human body network to the ground. If the measurement does not exceed a value deemed harmful to a human being as defined in international safety standards, the product is considered safe and compliant to electric shock prevention requirements.

Internal measurement circuit networks (I IEC60601-1) enable easily programmable test conditions.

*For details on other internally installed measurement circuit networks, see Specifications (P19).



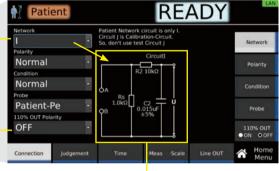


Measurement circuit network (network I IEC60601-1)

All in One!

Electrical safety standard testing for automotive components

Compatible with both AC and DC, the TOS9303LC complies with a wide varety of safety tests for EV batteries, automotive charging devices and charging connectors. This "all-in-one" safety analyzer can meet the needs of nearly all automotive electrical safety standards.

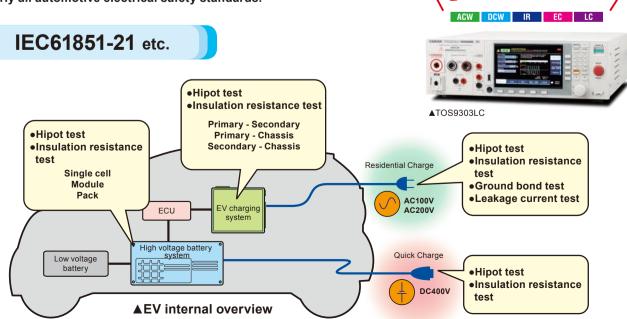




PV (solar battery) module withstanding voltage/insulation resistance testing

Withstanding voltage tests such as IEC61730-2 and JIS C 8992-2 require testing voltage to be drastically increased (4 times the maximum system voltage + 2000 V) and maintained for 1 minute.


[Voltage 1000 V adaptation grade A example]

1000 V × 4-fold + 2000 V = **Test voltage** : **6000 V**

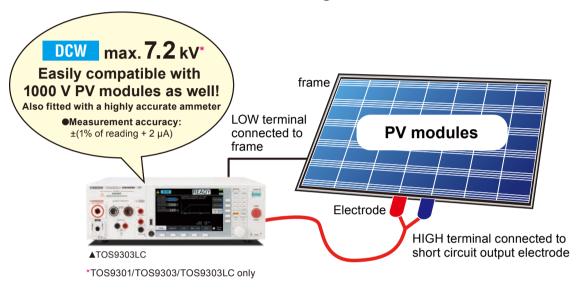

Multi-channel withstanding voltage/insulation resistance testing

Multiple testing points can be simultaneously tested to cut costs and save time! The TOS9320 high voltage scanner allows for multi channel expansion for the TOS9300 series as well as previous models.

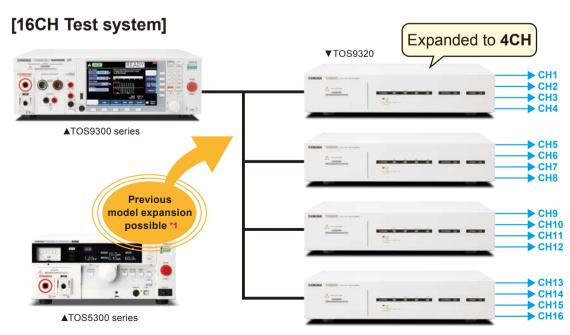

 $^{^{\}star 1}$ Independent control of the scanner is required using EXTERNAL I / O.

^{*} Mount on a rack when using two or more scanners.


Exterior Design

Front panel

●TOS9303LC

DANGER LED

Lights red when the power is turned on, when a test is in progress, when a high voltage is being output, or when there is residual voltage at the output terminals. On the TOS9303LC, the LED also lights red when supply voltage

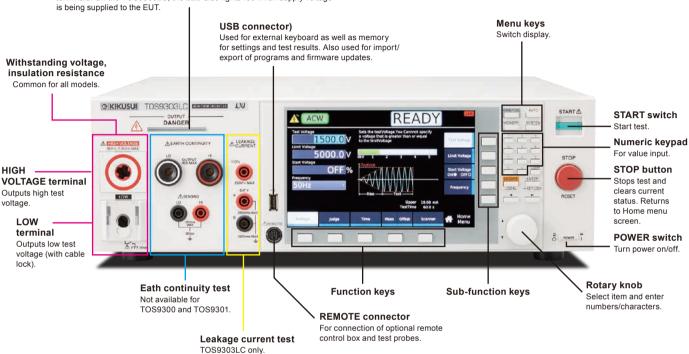

Rear panel

●TOS9303LC

I terminal

Signal output terminal for monitoring current waveforms for withstanding voltage tests. Withstanding voltage, V terminal insulation resistance RS232C port SCANNER connector Signal output terminal Common for all models. For remote control. for monitoring voltage Connect to optional high voltage scanner. waveforms for withstanding SIGNAL I/O connector USB port voltage tests I/O signal connector for control For remote control. **STATUS OUT connector** Leakage current via external signals Connects optional products. LAN port TOS9303LC only. For remote control. **HIGH VOLTAGE** terminal Outputs high test voltage. DC OUT 5 V terminal LOW terminal Connects optional Outputs low test voltage products. (with cable lock). E 00


> **AC INPUT inlet** 100 V to 120 V/ 200 V to 240 V



Display (Each menu screen)

●TOS9303LC screen example



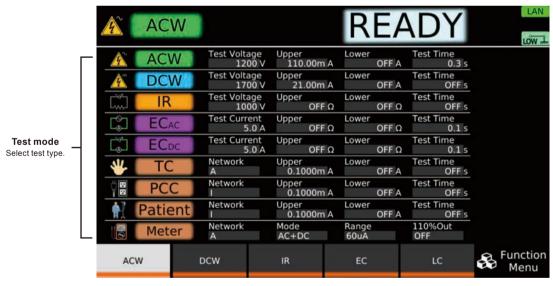

▲Function Menu

Displays summary of settings for each test. Switch test modes.



Configure and execute auto tests.



▲Memory Menu
Use memory function.



Display and change system settings.

Unless specified otherwise, the specifications are for the following settings and conditions.

- . The product is warmed up for at least 30 minutes.
- The product is warmed up for at least 30 minutes.
 TYP: These are typical values that are representative of situations where the product operates in an environment with an ambient temperature of 23 °C. These values do not guarantee the performance of this product.
 setting: Indicates a setting. range: Indicates the rated value of each range. reading: Indicates a readout value.
 The various tests are abbreviated as follows: ACW: AC withstanding voltage, DCW: DC withstanding voltage, IR: insulation resistance, EC: earth continuity, LC: leakage current, TC: touch current, PCC: protective conductor current, Patient: patient leakage current, Meter: meter mode

■ Wishtanding Voltage Test

[Output function]

Item			TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC		
			0.050 kV to 5.000 kV	0.050 kV to 5.000 kV					
	Output range	Resolution	Resolution 1 V						
		Setting accuracy	±(1.2 % of setting + 20 \	/) (at no load)					
	Max. rated load *1	Max. rated load *1							
AC output section	Max. rated current		100 mA (when the output	it voltage is 0.2 kV or high	ner)				
	Transformer rating		500 VA						
	Output voltage		Sine						
	waveform *2	Distortion	2 % or less. (when the output voltage is 0.5 kV or higher and no load or a pure resistive load is connected)						
	Crest factor		√2 ± 3 % (800 V or more)						
	Francisco		50 Hz / 60 Hz						
	Frequency	Accuracy	±0.1 %						
	Voltage regulation	Voltage regulation		±3 % or less (when changing from maximum rated load to no load)					
	Short-circuit currer	nt	200 mA or more (output voltage 0.5 kV or higher)						
	Output method		PWM switching						
Start voltage			The voltage at the start of the test can be set.						
		Setting range	0 % to 99 % of the test v	oltage					
Resolution			1 %						
Output voltage monitor function		If the output voltage exceeds ±(10 % of setting + 50 V), the output is turned off, and the protection function is activated.							

[DC Output function]

Item			TOS9301	TOS9301 TOS9303 TOS9303LC				
	Output voltage ra	nge	0.050 kV to 7.200 kV					
		Resolution	1 V					
		Setting accuracy	±(1.2 % of setting + 20 V)	±(1.2 % of setting + 20 V)				
DC output section	Max. rated load *	1	100 W (5 kV/20 mA, 7.2 kV/13.9 mA)					
	Max. rated current		20 mA					
	Ripple	7.2 kV no load	20 Vp-p (TYP)					
	Kippie	Max. rated load	50 Vp-p (TYP)					
	Voltage regulation	n	1 % or less (when changing from maximum rated load to no load)					
	Short-circuit curre	ent	100 mA (TYP) (200 mA peak)					
	Discharge function	n	Forced discharge after test completion (discharge resistance: 125 kΩ)					
Start voltage			The voltage at the start of the test can be	The voltage at the start of the test can be set.				
		Setting range	0 % to 99 % of the test voltage					
Resolution			1 %					
Output voltage monitor function		If the output voltage exceeds ±(10 % of setting + 50 V), the output is turned off, and the protection function is activated.						

^{*1} When tests are performed consecutively, output time limit and rest time may become necessary depending on the upper limit setting

[Measurement function]

Item		TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC			
	Measurement range	0.00 kV to 7.50 kV AC/D	0.00 kV to 7.50 kV AC/DC						
	Resolution	0.1 V	0.1 V						
	Accuracy	±(1.2 % of reading + 5 V))						
Voltmeter		Can be switched betwee	n true rms and mean-val	ue response rms conver	sion.				
	Response	Peak-value response in	a separate system						
		(the peak-value response	(the peak-value response is for measur-ing the dielectric breakdown voltage while rising)						
	Hold function	The voltage measureme	The voltage measurement after a test is finished is held while the pass/fail judgment is displayed.						
	Measurement range	AC: 0.00 mA to 110 mA,	AC: 0.00 mA to 110 mA, DC: 0.00 mA to 22 mA (Current including the active component and reactive component)						
	Accuracy	±(1 % of reading + 2 μA)	±(1 % of reading + 2 μA) (active component)						
	Response	Can be switched between	Can be switched between true rms and mean-value response rms conversion.						
Ammeter	Hold function	The current measureme	The current measurement after a test is finished is held while the pass judgment is displayed.						
1 *2	Offset cancel function	Cancels up to 10 mA of t	Cancels up to 10 mA of the current flowing through the insulation resistance and stray capacitance components across						
	Offset cancer function	output cables and the lik	output cables and the like (resistance component only for DC tests). OFF function available.						
	Calibration	Active component: Calib	Active component: Calibrated with the rms of a sine wave using a pure resistive load.						
	Calibration	Reactive component: No	Reactive component: Not calibrated.						

^{*1} During AC voltage tests, current also flows in the stray capacitance of items such as the test leads and tools. For details on stray capacitance, see "Stray Capacitance of AC Withstanding Voltage Tests"

^{*2} If an AC voltage is applied to a capacitive load, the output voltage may rise higher than at no load depending on the load capacitance. Further, waveform distortions may occur if an EUT whose capacitance is dependent on voltage (for example, an EUT that consists of ceramic capacitors) is connected as the load. However, if the test voltage is 1.5 kV, the effect of a capacitance of 1 000 pF or less can be ignored. Because the product's high-voltage power supply uses the PWM switching method, if the test voltage is 500 V or less, the switching and spike noise proportions are large. The lower the test voltage, the greater the waveform is distorted.

^{*2} When the temperature and humidity are high, erroneous current from the product's internal and external high-voltage wiring sections to ground increases. When the humidity exceeds 70 %, an erroneous current of about 50 μA may be generated.



[Judgment function]

Item			TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC		
Current judgment operation			en a judgment is made. E test, the buzzer is valid						
		Judgment method		en a current greater than ot made during the judgm					
	UPPER FAIL	Display	"U-FAIL" is displayed.						
		Buzzer	On						
		SIGNAL I/O	The U-FAIL signal is ger	nerated continuously until	a STOP signal is receive	ed.			
		Judgment method		en a current less than or uring Voltage rise time or	•				
	LOWER FAIL	Display	"L-FAIL" is displayed.		-				
		Buzzer	On						
		SIGNAL I/O The L-FAIL signal is generated continuously until a STOP signal is received.							
		Judgment method	PASS judgment is made	if U-FAIL or L-FAIL has r	not occurred when the te	st time elapses.			
		Display	"PASS" is displayed.						
	PASS	Buzzer	On (fixed to 50 ms)						
		SIGNAL I/O	The PASS signal is generated for the length of time specified by the Pass Hold set-ting. If Pass Hold is set to Infinity, the PASS signal is generated continuously until a STOP signal is received.						
/oltage rise r	rate judgment operati	on	is set to on and the outp	e rate during Voltage rise ut voltage is 200 V or mon of 0 (OFF) to 10 for pass a	re. The output is shut off				
		Judgment method	When the voltage rise ra	te (dV/dt) is less than app	orox. 1 V/s, UPPER FAIL	results.			
	UPPER FAIL	Display	"7 U-FAIL" is displayed.						
	UPPERFAIL	Buzzer	ON						
		SIGNAL I/O	The U FAIL signal is ger	erated continuously until	a STOP signal is receive	ed.			
Upper limit setting range		AC: 0.01 mA to 110.00 mA, DC: 0.01 mA to 21.00 mA							
Lower limit setting range		AC: 0.00 mA to 109.99 mA, DC: 0.00 mA to 20.99 mA, OFF. Setting 0.00 is equiva-lent to OFF.							
Judgment accuracy *1 *2		±(1 % of setting + 5 μA)							
Current detection method		Compares to the reference value using the following method. Calculate true rms values, convert mean-value responses to rms values							
Response speed (filter) switching		Switches the current detection response speed (sensitivity) used in UPPER FAIL judgment between five levels in ACW and DCW tests.							

^{*1} During AC voltage tests, current also flows in the stray capacitance of items such as the test leads and tools. For details on stray capacitance, see "Stray Capacitance of AC Withstanding Voltage Tests"

[Timer function]

Item	TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC		
Voltage rise time settings range	0.1 s to 200 s						
Voltage fall time setting time *1	0 s to 200s, OFF						
Test time setting range	0.1 s to 1000 s, OFF						
Judgment delay (Judge Delay) setting range *2	0.3 s to 10 s, AUTO *3 (DCW only)						
Accuracy	±(100 ppm of setting + 20 ms) (excluding the fall time)						

^{*1} This setting is used only when a PASS judgment occurs in ACW and DCW tests. During a DCW test, the voltage may not drop all the way within the set time because of the electrostatic capacity inside the product and the EUT.

[Other specifications]

Free contract of							
Item		TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC	
Analog monitor *1		Outputs a voltage signa	al according to the current	waveform or voltage wav	veform .		
	I	Current waveform: Scal	le 50 mA/1 V				
	V	Voltage waveform: Scal	le 1 kV/1 V				
Grounding mode (GND)		Can be switched betwe	Can be switched between Low and Guard.				
		GND is connected to the low terminal. Measures the current flowing across the low terminal and chassis (normal					
	Low	applications).					
	Guard *2	GND is connected to Guard. Measures only the current flowing through the low terminal (cur-rent flowing through the					
	Guard 2	chassis is not measured) (high sensitivity, high accuracy measure-ment applications).					

^{*1} Monitor signal output is isolated from the chassis (earth). If you connect an oscilloscope or an external device whose BNC shield is grounded, be sure to set the grounding mode (GND) to Guard. The value is not calibrated.

^{*2} When the temperature and humidity are high, erroneous current from the product's internal and external high-voltage wiring sections to ground increases. When the humidity exceeds 70 %, an erroneous current of about 50 μA may be generated.

^{*2} Less than the sum of the rise time and fall time.

^{*3} If Delay Auto is set to on, LOWER judgment is not made until the charge time ends.

^{*2} If there is a possibility that the EUT or tools and the like will be grounded or if you are uncertain, do not set GND to Guard. Doing so is extremely dangerous because the ammeter will be shorted and will not be able to measure current. For normal applications, set GND to Low.

■ Insulation Resistance Test

[Output function]

tem			TOS9300	TOS9301	TOS9303	TOS9303LC			
	0	,	-25 V to -1000 V						
	Output voltage	Resolution	1 V						
I	range	Setting accuracy	±(1.2 % of setting + 2 V)						
legative olarity	Max. rated load		1 W (-1000 V/1 mA)		-				
olarity	Binnlo	1 kV no load	2 Vp-p or less						
	Ripple	Max. rated load	10 Vp-p or less						
	Short-circuit curre	ent	12 mA or less	12 mA or less					
	0	,		+50 V to +7200 V					
	Output voltage range	Resolution		1 V					
Do aitiu a	range	Setting accuracy		±(1.2 % of setting + 20 V)					
Positive polarity *1	Max. rated load		_	7.2 W(7200 V/1 mA)					
Dolai ity i	Ripple	1 kV no load		20 Vp-p or less					
	Kippie	Max. rated load		50 Vp-p or less					
	Short-circuit curre	ent		100 mA (TYP) (200 mA peak)					
Max. rated cur	rent	,	1 mA						
Voltage regulation		1 % or less (when changing from maximum rated load to no load)							
Discharge fun	ction	,	Forced discharge after test completion (discharge resistance: 20 k Ω)						
Output voltage	monitor function		If the output voltage exceeds	±(10 % of setting + 50 V), the or	utput is turned off, and the prot	If the output voltage exceeds ±(10 % of setting + 50 V), the output is turned off, and the protection function is activated.			

^{*1} TOS9300 are not supported.

[Measurement function]

Item			TOS9300	TOS9301	TOS9303	TOS9303LC	
	Measurement range		Negative polarity: 0 Vdc to -12	Negative polarity: 0 Vdc to -1200 Vdc, positive polarity: 0 Vdc to 7500 Vdc			
Voltmeter	Resolution		0.1 V				
	Accuracy		Negative polarity: ±(1 % of real	ading + 1 V), positive polarity:	±(1.2 % of reading + 1 V)		
	Measurement rai	nge	$0.001~\text{M}\Omega$ to $100.0~\text{G}\Omega$ (in the	range of maximum rated curre	ent of 1 mA to 5 nA)		
		5 nA ≤ i ≤ 50 nA	$500.0 \text{ M}\Omega \le \text{R} < 10.00 \text{ G}\Omega$:	\pm (15 % of reading + 5 digit) *3			
	Accuracy *1 *2	311A 21 2 30 11A	10.00 GΩ ≤ R ≤ 100.0 GΩ:	±(20 % of reading + 20 digit) *	3		
	(when GND is	50 nA < i ≤ 100 nA	200.0 MΩ \leq R $<$ 50.00 GΩ:	±(10 % of reading + 5 digit) *3			
	set to Guard) (i: measured	30 IIA < 1 \(\) 100 IIA	$50.00 \text{ G}\Omega \leq R \leq 100.0 \text{ G}\Omega$:	50.00 GΩ ≤ R ≤ 100.0 GΩ: \pm (20 % of reading + 20 digit) *3			
	cur-rent)(R:	100 nA < i ≤ 200 nA	100.0 MΩ ≤ R < 2.000 GΩ:	±(7 % of reading + 5 digit) *4			
	measurement	100 IIA < 1 3 200 IIA	2.000 GΩ ≤ R < 50.00 GΩ:	±(7 % of reading + 10 digit) *	4		
	resistance)	200 nA < i ≤ 1 μA	10.00 MΩ ≤ R < 25.00 GΩ:	\pm (5 % of reading + 5 digit) *4			
	,	1 μA < i ≤ 1 mA	$0.01 \text{ M}\Omega \le R < 5.000 \text{ G}\Omega$:	±(2 % of reading + 3 digit) *	4		
Resistance		5 nA ≤ i ≤ 50 nA	$500.0 \text{ M}\Omega \le R < 10.00 \text{ G}\Omega$:	\pm (25 % of reading + 5 digit) *3			
meter	Accuracy *5		$10.00 \text{ G}\Omega \leq R \leq 100.0 \text{ G}\Omega$:	±(30 % of reading + 20 digit) *	3		
	(when GND is set to Low)	50 nA < i ≤ 100 nA	200.0 MΩ ≤ R < 50.00 GΩ:	±(20 % of reading + 5 digit) *3			
	(i: measured	30 11A < 12 100 11A	$50.00 \text{ G}\Omega \leq R \leq 100.0 \text{ G}\Omega$:	±(30 % of reading + 20 digit) *	3		
	cur-rent)(R:	100 nA < i ≤ 200 nA	100.0 MΩ ≤ R < 2.000 GΩ:	±(10 % of reading + 5 digit) *4			
	measurement	100 IIA < 1 3 200 IIA	2.000 GΩ ≤ R < 50.00 GΩ:	±(10 % of reading + 10 digit) *4	1		
	resistance)	200 nA < i ≤ 1 μA	10.00 MΩ ≤ R < 25.00 GΩ:	±(5 % of reading + 5 digit) *4			
	,	1 μA < i ≤ 1 mA	$0.01 \text{ M}\Omega \le R < 5.000 \text{ G}\Omega$:	±(2 % of reading + 3 digit) *4			
	Hold function		The resistance measurement after a test is finished is held while the pass judgment is displayed.				
	Offset cancel fun	ction	Cancels up to 2000 G Ω of the unnecessary insulation resis-tance across output cables and the like. OFF function avail-able.				

^{*1} Humidity: 70 %rh or less (no condensation), when there is no interference caused by wobbly test leads or other prob-lems.

^{*2} f the grounding mode (GND) is set to low in a highly humid environment, leakage current to ground will be generated from the high-voltage wiring sections inside the product and the high-voltage wiring sections between the product and the EUT. This leakage current ranges from several nA to several tens of nA depending on the usage and wiring con-ditions of the optional TOS9320 high voltage scanner and greatly affects measurement accuracy. The effects of leak-age current can be reduced by making measurements with the offset enabled.

 $^{^{*3}}$ Add 10 % to the accuracy when measuring 100 V or less.

^{*4} Add 5 % to the accuracy when measuring 100 V or less.

^{*5} When the measured current is limited to 100 nA or more (no condensation) when the humidity is 50 %rh or less, no external disturbance is present such as swinging test leads, and the offset is enabled.



[Judgment function]

Item			TOS9300	TOS9301	TOS9303	TOS9303LC	
			The output is shut off when	a judgment is made. Buzzei	volume level can be set in the r	ange of 0 (OFF) to 10 for	
Behavior based on ju-	dgment		pass and fail separately.				
				that takes place at the end of the			
		Judgment method	UPPER FAIL results when a	resistance greater than or	equal to the Upper limit is detec	ted.	
		Judgment method	Judgment is not made durin	g or Voltage rise time.			
UI	PPER FAIL	Display	"U-FAIL" is displayed.				
		Buzzer	On				
		SIGNAL I/O	The U-FAIL signal is genera	ated continuously until a STO	OP signal is received.		
		Judgment method	LOWER FAIL results when a Judgment is not made durin		ual to the Lower limit is detected e Delay).	l.	
LC	LOWER FAIL	Display	"L-FAIL" is displayed.				
		Buzzer	On				
		SIGNAL I/O	The L-FAIL signal is generated continuously until a STOP signal is received.				
		Judgment method	PASS judgment is made if U-FAIL or L-FAIL has not occurred when the test time elapses.				
		Display	"PASS" is displayed.				
PA	PASS	Buzzer	On (fixed to 50 ms)				
		SIGNAL I/O			cified by the Pass Hold setting. ted continuously until a STOP si		
Voltage rise rate judg	ment operation		Monitors the voltage rise rate during Voltage rise time. This is valid when Auto setting of the judgment delay (Delay Auto) is set to on and the output voltage is 200 V or more. The output is shut off when a judgment is made. Buzzer volume level can be set in the range of 0 (OFF) to 10 for pass and fail separately.				
		Judgment method	When the voltage rise rate (· · · · · · · · · · · · · · · · · · ·		
		Display	"7 L-FAIL" is displayed.	a viaty to toos than approx.	770, 01.1 211.17112.1000110.		
LC	OWER FAIL	Buzzer	On On				
		SIGNAL I/O	The L FAIL signals are gene	erated continuously until a S	TOP signal is received		
Upper limit setting rar	nge		0.001 MΩ to 100.000 GΩ (ir				
Lower limit setting rar	•		`	<u> </u>	m rated current), OFF. Setting 0	000 is equivalent to OFF	
zowo: oottang rai	90		· ·	±(15 % of setting + 15 digi		.ooo io oquiraioni to or i i	
		5 nA ≤ i ≤ 50 nA		±(20 % of setting + 30 dig	,		
Accuracy *1			200.0 MΩ ≤ R < 50.00 GΩ: ±(10 % of setting + 15 digit)				
		50 nA < i ≤ 100 nA	$50.00 \text{ G}\Omega \leq R < 100.0 \text{ G}\Omega$: $\pm (20 \% \text{ of setting} + 30 \text{ digit})$				
(i: measured current)		400 - 4 + 1 + 000 - 4		±(7 % of setting + 15 digit)	-		
(R: measure-ment res	sis-tance)	100 nA < i ≤ 200 nA	2.000 GΩ ≤ R < 50.00 GΩ:	±(7 % of setting + 20 digit)		
		200 nA < i ≤ 1 μA	10.00 MΩ ≤ R < 25.00 GΩ:	±(5 % of setting + 15 digit))		
		1 μA < i ≤ 1 mA	$0.01 \text{ M}\Omega \le R < 5.000 \text{ G}\Omega$: $\pm (2 \% \text{ of setting + 13 digit)}$				

^{*1} Making judgments on 200 µA or less requires at least 3 seconds after the rise time ends. Making judgments when the low pass filter is set to on requires at least 10 seconds after the rise time ends.

[Timer function]

Item	TOS9300 TOS9301 TOS9303 TOS9303					
Voltage rise time settings range	0.1 s to 200 s					
Test time setting range	0.5 s to 1000 s, OFF					
Judgment delay (Judge Delay) setting range *1	0.1 s to 10 s, AUTO *2					
Accuracy *3	±(100 ppm of setting + 20 ms)					

^{*1} Less than the sum of the rise time and fall time.

[Other specifications]

Item		TOS9300	TOS9301	TOS9303	TOS9303LC	
Grounding mode (GND)		Can be switched between Low and Guard.				
	Low	GND is connected to the low terminal. Measures the current flowing across the low terminal and chassis (normal applications).				
Guard *1 GND is connected to Guard. Measures only the current flowing through the low terminal chassis is not measured) (high sensitivity, high accuracy measurement applications).						
Filter function		A low-pass filter can be inserted into the ammeter measurement circuit. *2				

^{*1} If there is a possibility that the EUT or tools and the like will be grounded or if you are uncertain, do not set GND to Guard. Doing so is extremely dangerous because the ammeter will be shorted and will not be able to measure current. For normal applications, set GND to Low.

^{*2} If Delay Auto is set to on, UPPER judgment is not made until the charge time ends.

^{*3} This excludes fall time.

^{*2} When the low pass filter is on, a judgment delay of at least 5 seconds and a test time are required.

■ Earth Continuity Test

[Output function]

Item	em .		TOS9302	TOS9303	TOS9303LC			
		3.0 A to 42.0 A AC/DC	3.0 A to 42.0 A AC/DC					
Current set	ting range *1	Resolution	0.1 A	0.1 A				
		Accuracy	±(1 % of setting + 0.4 A)					
	Maximum rated of	output *2	220 VA (at the output terminal)					
	Distortion		2 % or less (20 A or more, using a 0.1 Ω p	2 % or less (20 A or more, using a 0.1 Ω pure resistive load)				
AC	Francis		Select 50 Hz or 60 Hz. Sine	Select 50 Hz or 60 Hz. Sine				
AC	Frequency	Accuracy	±200 ppm					
	Open terminal vo	ltage	6 Vrms or less	6 Vrms or less				
	Output method		PWM switching	PWM switching				
	Maximum rated of	output	220 W (at the output terminal)	220 W (at the output terminal)				
DC	Ripple		±0.4 Ap-p or less (TYP)	±0.4 Ap-p or less (TYP)				
	Open terminal vo	ltage	6.0 V or less	6.0 V or less				

[Measurement function]

Item		TOS9302	TOS9303	TOS9303LC					
	Measurement range	0.0 A to 45.0 A AC/DC	0.0 A to 45.0 A AC/DC						
0	Resolution	0.1 A	0.1 A						
Output ammeter	Accuracy	±(1 % of reading + 0.2 A)							
ammeter	Response	AC: true rms value: DC: mean value							
	Hold function	The current measurement after a test is	finished is held while the pass or fail judg	ment is displayed.					
	Measurement range	AC: 0.00 V to 6.00 V, DC: 0.00 V to 8.50	V						
	Resolution	0.01 V							
Output	Offset cancel function	Cancels up to 5 V (AC/DC) of the unnece	Cancels up to 5 V (AC/DC) of the unnecessary voltage from measurements. OFF function available.						
voltmeter	Accuracy	±(1 % of setting + 0.02 V)	±(1 % of setting + 0.02 V)						
	Response	AC: true rms value: DC: mean value							
	Hold function	The voltage measurement after a test is	The voltage measurement after a test is finished is held while the pass or fail judgment is displayed.						
	Measurement range *1	0.001 Ω to 0.600 Ω							
.	Resolution	0.001 Ω	0.001 Ω						
Resistance meter	Offset cancel function	Cancels up to 10 Ω of the unnecessary r	Cancels up to 10 Ω of the unnecessary resistance from measurements. OFF function available.						
meter	Accuracy	±(2 % of reading + 0.003 Ω)	$\pm (2\% \text{ of reading} + 0.003 \Omega)$						
	Hold function	The resistance measurement after a test	The resistance measurement after a test is finished is held while the pass judg-ment is displayed.						

^{*1} Calculated from the measured output voltage and measured output current.

^{*1} No greater than the maximum rated output and resistance no greater than the output terminal voltage 5.4 V.
*2 When tests are performed consecutively, output time limit and rest time may become necessary depending on the up-per limit setting.



[Judgment function]

Item			TOS9302	TOS9303	TOS9303LC				
			Judgment based on resistance or sensing	g voltage can be selected. The output is	shut off when a judgment is made.				
			Buzzer volume level can be set in the rar						
			In an auto test, the buzzer is valid only for the judgment that takes place at the end of the program.						
		Judgment method	UPPER FAIL results when a resistance of	greater than or equal to the Upper limit is	detected or when a sensing voltage is				
		Judginent metriou	detected. Judgment is not made during a	contact check.					
	UPPER FAIL	Display	"U-FAIL" is displayed.	"U-FAIL" is displayed.					
		Buzzer	On						
Behavior based on judgment		SIGNAL I/O	The U-FAIL signal is generated continuo	usly until a STOP signal is received.					
	LOWER FAIL	Judgment method	LOWER FAIL results when a resistance is detected.	less than or equal to the lower limit (Lowe	er) is detected or when a sensing voltage				
		Display	"L-FAIL" is displayed.						
		Buzzer	On						
		SIGNAL I/O	The L-FAIL signal is generated continuou	usly until a STOP signal is received.					
		Judgment method	PASS judgment is made if U-FAIL or L-F.	AIL has not occurred when the test time e	elapses.				
		Display	"PASS" is displayed.						
	PASS	Buzzer	On (fixed to 50 ms)						
		CIONAL I/O	The PASS signal is generated for the len	gth of time specified by the Pass Hold se	tting.				
		SIGNAL I/O	If Pass Hold is set to Infinity, the PASS si	ignal is generated con-tinuously until a S	TOP signal is received.				
5	Upper limit setting	range	0.0001 Ω to 10.0000 Ω						
Resistance	Lower limit setting	range	0.0000 Ω to 9.9999 Ω						
judgment	Judgment accurac	су	\pm (2 % of UPPER + 0.003 Ω)						
	Upper limit setting	range	0.001 V to 5.000 V AC/DC						
Voltage	Lower limit setting	range	0.000 V to 4.999 V AC/DC						
judgment	Judgment accurac	cy	±(2 % of UPPER + 0.05 V)						
Calibration	-	-	Calibrated using a pure resistive load (with the rms of a sine wave for AC)						
Contact check fu	ınction		Checks that current flows through the tes	st leads and then starts the test. (OFF set	ting available)				

[Timer function]

Item	TOS9302 TOS9303		TOS9303LC		
Voltage rise time settings range	0.1 s to 200 s				
Voltage fall time setting time *1	0.1 s to 200 s, OFF				
Test time	0.3 s to 1000 s, OFF				
Accuracy	±(100 ppm of setting + 20 ms) (excluding the fall time)				

^{*1} This setting is used only when a PASS judgment occurs. During a DC test, the voltage may not drop all the way within the set time because of the electrostatic capacity inside the product and the EUT.

■ Leakage Current Test

[Measurement function]

Item				TOS9303LC
	TC			Touch current measurement
		Measurement	mode	Uses a measurement circuit network representing the impedance of a human body and measures the voltage drop across a refer-ence resistance to calculate the touch current.
			Enc - Pe	A terminal: measurement terminal (for connecting to the enclo-sure of the EUT) B terminal: open
		Probe settings	Enc - Enc	A and B terminals: measurement terminal (for connecting to the enclosure of the EUT)
		settings	Enc - Liv	A terminal: measurement terminal (for connecting to the enclo-sure of the EUT)
			Enc - Neu	B terminal: open
				Protective conductor current measurement
Measurement	PCC	Measurement method		Measures the voltage drop across a reference resistance inserted in the middle of the protective ground line to calculate
Item				the protec-tive conductor current. The measurement impedance is 150 Ω .
				Patient leakage current measurement
	Patient Measurement		method	Uses a network conforming to IEC 60601 and measures the volt-age drop across a reference resistance to calculate the patientleakage current.
				Measures the current flowing or voltage applied across the A and B terminals (simultaneous measurement not possible).
	Meter		Current	Uses a measurement circuit network representing the impedance of a human body and measures the voltage drop
	Meter	Measurement	measurement	across a refer-ence resistance to calculate the current flowing across the A and B terminals.
		method	Voltage	Measures the voltage applied across the A and B terminals.
			measurement	Weasures the voltage applied across the A and b terminals.
			DC	Eliminates AC components and measures only the DC component.
Current measur	ement mo	de	RMS	Measures the true rms value (switch AC and AC+DC)
			Peak *1	Measures waveform peak values

^{*1} Current measurements may not be stable due to the effects of the power supply line waveform or the wiring environ-ment between the product and the EUT.


[Measurement circuit network]

Item		-	TOS9303LC	
	A (IEC 609	990 compliant) *1	(1.5 k Ω // 0.22 μ F) + 500 Ω , reference measurement element: 500 Ω	
	B (IEC 609	990 compliant)	$(1.5 \text{ k}\Omega$ // $0.22 \mu\text{F})$ + 500 Ω // $(10 \text{ k}\Omega$ + 22 nF), reference measurement element: 500 Ω , voltage measurement U1 and U3 switchable	
	C (IEC 609	990 compliant)	(1.5 k Ω // 0.22 μ F) + 500 Ω // (10 k Ω + (20 k Ω + 6.2 nF) // 9.1 nF), refer-ence measurement element: 500 Ω , voltage measurement U1 and U3 switchable	
	D (Electrica Act, etc.)	l Appliances and Materials Safety	1 kΩ, reference measurement element: 1 kΩ	
Network	E (Electrica Act)	Appliances and Materials Safety	1 k Ω // (10 k Ω + 11.225 nF + 579 Ω), reference measurement element:1k Ω	
	F (UL and t	he like)	1.5 kΩ // 0.15 μF, reference measurement element: 1.5 kΩ	
	G		$2 \text{ k}\Omega$, reference measurement element: $2 \text{ k}\Omega$	
	H (IEC 610	10-1, 60601-1wet)	375 Ω // 0.22 μF + 500 Ω , reference measurement element: 500 Ω	
	I (Patient)		1 kΩ // 10 kΩ + 0.015 μF, reference measurement element: 1 kΩ	
	J (through)		For voltmeter calibration	
	PCC-1		150 Ω , reference measurement element: 150 Ω	
	PCC-2 (IEC	60598-1)	150 Ω // 1.5 μ F, reference measurement element: 150 Ω	
Network consta	ant tolerance		Resistance: ±0.1 %, capacitor 0.15 µF: ±2 %, others: ±1 %	
	A, B, C, H		Input voltage vs. output voltage ratio: logical value ± 5 %(according to IEC 60990 Annex L and F)	
Notwork accura		E	Input voltage vs. output voltage ratio: logical value ± 5 %	
Network accu	гасу	D, G	Reference measurement element (resistance) ± 1 %	
		I	Input voltage vs. output voltage ratio: logical value ± 5 %	


^{*1} Current measurements may not be stable due to the effects of the power supply line waveform or the wiring environ-ment between the product and the EUT.




 Measurement circuit network (NetworkA IEC 60990 Fig. 3 U1 measurement)




 Measurement circuit network (NetworkB-U1 IEC 60990 Fig. 4 U2 measurement)




 Measurement circuit network (NetworkB-U2 IEC 60990 Fig. 4 U1 measurement)




 Measurement circuit network (NetworkC IEC 60990 Fig. 5 U3 measurement)




 Measurement circuit network
 (NetworkD Electrical Appliances and Materials Safety Act single frequency)




 Measurement circuit network
 (NetworkE Electrical Appliances and Materials Safety Act multiple frequencies)




 Measurement circuit network (NetworkF IEC 61029, UL)




 Measurement circuit network (NetworkG IEC 60745)




 Measurement circuit network (Networkl IEC 60601-1)



 Measurement circuit network (NetworkPCC-1)



 Measurement circuit network (NetworkPCC-2 IEC60598-1)



[Measurement section]

Item				TOS9303LC
Measured current	Ι < 100 μΑ			□□.□□ μA, resolution 0.01 μA
display	100 μA ≤ I < 1 mA			□□□. μA, resolution 0.1 μA
(I: measured current)	1 mA ≤ I < 10 mA			□.□□□ mA, resolution 0.001 mA
(□: measurement display)	10 mA ≤ I	< 100 m/	A	□□.□□ mA, resolution 0.01 mA
. ,,	Range 1			DC, RMS: 1 μA(min.) to 200 μA(max), Peak: 1 μA(min.) to 282 μA(max)
	Range 2			DC, RMS: 12.5 μA(min.) to 2.00 mA(max), Peak: 17.5 μA(min.) to 2.83 mA(max)
	Range 3			DC, RMS: 125 µA(min.) to 20.00 mA(max), Peak: 175 µA(min.) to 28.3 mA(max)
	Range 4			DC, RMS: 1.25 mA(min.) to 100 mA(max), Peak: 1.75 mA(min.) to 100 mA(max)
	Range sw	itching		Auto or Fix selectable. If a measurement falls outside the measurement range of each range, the measured value blinks as a warning.
Measurement range		Auto		The range is set automatically according to the measurements.
'1				For TC and PCC measurements, the measurement range is selected automatically according to the UPPE
		Fix		value. For meter measurements, the range is fixed to the specified range.
	Daniel del			Can be expanded to a bandwidth that allows measurements from 0.1 Hz, which is required in the
	Bandwidth	n switchir	ng	measurement of medical instruments and the like.
		Normal		Normal measurement bandwidth: 15 Hz to 1 MHz
		Expand	l	Expands the measurement range to 0.1 Hz to 1 MHz
		DC		±(5.0 % of reading + 2 μA)
			0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 2 μA)
		RMS	15 Hz ≤ f ≤ 100 kHz	±(7.0 % of reading + 2 μA)
	Range 1		100 kHz < f ≤ 1 MHz	±(10.0 % of reading + 2 μA)
			0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 10 μA)
		Peak	15 Hz ≤ f ≤ 1 kHz	±(10.0 % of reading + 10 μA)
		reak	1 kHz < f ≤ 100 kHz	±(10.0 % of reading + 10 μA)
			100 kHz < f ≤ 1 MHz	±(20.0 % of reading + 10 μA)
		DC		±(5.0 % of reading + 20 μA)
			0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 10 μA)
		RMS	15 Hz ≤ f ≤ 100 kHz	±(7.0 % of reading + 8 μA)
			100 kHz < f ≤ 1 MHz	±(10.0 % of reading + 10 μA)
	Range 2		0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 10 μA)
		DI.	15 Hz ≤ f ≤ 1 kHz	±(10.0 % of reading + 10 μA)
		Peak	1 kHz < f ≤ 100 kHz	±(10.0 % of reading + 10 μA)
Total accuracy *2			100 kHz < f ≤ 1 MHz	±(20.0 % of reading + 10 μA)
(when network A, B, or C is used) *3		DC		±(5.0 % of reading + 50 μA)
or C is used)			0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 20 μA)
		RMS	15 Hz ≤ f ≤ 100 kHz	±(7.0 % of reading + 20 μA)
	D		100 kHz < f ≤ 1 MHz	±(10.0 % of reading + 20 μA)
	Range 3		0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 50 μA)
		Dools	15 Hz ≤ f ≤ 1 kHz	±(7.0 % of reading + 50 μA)
		Peak	1 kHz < f ≤ 100 kHz	±(10.0 % of reading + 50 μA)
			100 kHz < f ≤ 1 MHz	±(20.0 % of reading + 50 μA)
		DC		±(5.0 % of reading + 0.5 mA)
			0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 0.2 mA)
		RMS	15 Hz ≤ f ≤ 100 kHz	±(7.0 % of reading + 0.2 mA)
	D 4		100 kHz < f ≤ 1 MHz	±(10.0 % of reading + 0.2 mA)
	Range 4		0.1 Hz ≤ f < 15 Hz	±(10.0 % of reading + 0.5 mA)
		Book	15 Hz ≤ f ≤ 1 kHz	±(7.0 % of reading + 0.5 mA)
		Peak	1 kHz < f ≤ 100 kHz	±(10.0 % of reading + 0.5 mA)
			100 kHz < f ≤ 1 MHz	±(20.0 % of reading + 0.5 mA)
Input resistance				1 MΩ ± 1 %
Input capacitance				200 pF or less (internal voltmeter input capacitance: 100 pF or less)
Common mode rejecti	ion ratio			10 kHz or less: 60 dB or more, 10 kHz to 1 MHz: 40 dB or more
				Cancels up to 10 mA of the unnecessary current from mea-surements. OFF function available.

For F, the ■ part is one-third the value.

For G, the ■ part is one-fourth the value.

For PCC-1 or PCC-2, the ■ part is 3.3 times the value.

^{*1} Voltmeter band expansion is possible when network I is selected.
*2 0.1 Hz ≤ f < 15 Hz is for when voltmeter band expansion (VoltMeter BandWidth) is set to Expand. Requires at least 120 second of test time.
*3 A value converted to current for measurements using Network A, B, C or H with voltmeter accuracy of this product as the refer-ence.
If a network other than A, B, C or H is used, calculate as follows:
For Network D, E, or I, the ■ part of ±(□% of reading + ■A) is half the value.



[Judgment function]

Item			TOS9303LC
			Judgment starts after the judgment delay (Judge Delay). Buzzer volume level can be set in the range of 0 (OFF) to 10 for pass and fail separately. In an auto test, the buzzer is valid only for the judgment that takes place at the end of the program.
		Judgment method	UPPER FAIL results when a current greater than or equal to the upper limit (Upper) is detected.
	UPPER FAIL	Display	"U-FAIL" is displayed.
	OFFERFAIL	Buzzer	On
		SIGNAL I/O	The U-FAIL signal is generated continuously until a STOP signal is received.
Behavior based		Judgment method	LOWER FAIL results when a current less than or equal to the lower limit (Lower) is detected.
on judgment	LOWER FAIL	Display	"L-FAIL" is displayed.
on juaginent	LOWER FAIL	Buzzer	On
		SIGNAL I/O	The L-FAIL signal is generated continuously until a STOP signal is received.
	PASS	Judgment method	PASS judgment is made if U-FAIL or L-FAIL has not occurred when the test time elapses.
		Display	"PASS" is displayed.
		Buzzer	On (fixed to 50 ms)
		SIGNAL I/O	The PASS signal is generated for the length of time specified by the Pass Hold setting. If Pass Hold is set to Infinity, the PASS signal is generated continuously until a STOP signal is received.
	RANGE 1		DC, RMS: 0.1 μA(min.) to 200 μA(max), Peak: 0.1 μA(min.) to 282 μA(max)
Upper Setting	RANGE 2		DC, RMS: 15.1 μA(min.) to 2.00 mA(max), Peak: 21.3 μA(min.) to 2.83 mA(max)
range	RANGE 3		DC, RMS: 151 μA(min.) to 20.00 mA(max), Peak: 213 μA(min.) to 28.3 mA(max)
	RANGE 4		DC, RMS: 1.51 mA(min.) to 100 mA(max), Peak: 2.13 mA(min.) to 100 mA(max)
Lower Setting ra	nge		A value that is -1 digit from the upper setting range.
Judgment accura	асу		Conforms to total accuracy(Read "reading" as "upper setting" of total accuracy.)

[Timer function]

Item		TOS9303LC
Indemont delay (Indee Delay)	Setting range	1 s to 1000 s, AUTO
Judgment delay (Judge Delay)	Accuracy	±(100 ppm of setting + 20 ms)
Test time	Setting range	1 s to 1000 s, OFF
Test time	Accuracy	±(100 ppm of setting + 20 ms)

[Other specifications]

Item			TOS9303LC		
			Displays the estimated current converted with the preset supply voltage (Conv Voltage), based on the voltage supplied to		
Voltage conversion			the EUT and the measured current. (This is invalid in meter mode.)		
		Setting range	80.0 V to 300.0 V, OFF		
		Resolution	0.1 V		
Power supply lir	ne polarity selection		Set the polarity of the power supply line to supply to the EUT to positive or negative.		
Single fault mod	le (Condition) selecti	on	Set the EUT single fault mode to normal, neutral line disconnection (Fault Neu), or protective ground wire disconnection (Fault PE).		
Ground check			In the touch current test between the enclosure and power supply line, if the EUT enclosure is grounded, CONTACT FAIL occurs.		
Measurement c	neck		Checks the measurement function by shorting across the A and B terminals. If an error is found, the protection function is activated.		
		Measurement range	80.0 V to 250.0 V		
	measurementAC	Resolution	0.1 V		
LINE (EUT)		Accuracy	±(3 % of reading + 1 V)		
		Measurement range	0.1 A to 15.00 A		
	neasurementAC	Resolution	0.01 A		
LINE (EUT)		Accuracy	±(5 % of reading + 30 mA)		
		Measurement range	10 W to 1500 W		
Power measurement(active power)		Accuracy	±(5 % of reading + 8 W) (with the supply voltage at 80 V or more, at a load power factor of 1)		
	Measurement range	DC	10.00 V to 300.0 V		
		RMS	10.00 V to 300.0 V		
Voltage		Peak	15.00 V to 430.0 V		
measurement	Input impedance		Approx. 40 MΩ		
across the A	Accuracy *1		±(3 % of reading + 2 V) (measurement range fixed to AUTO)		
and B termi- nals	SELV detection	,	Set a voltage for detecting SELV. When the value is exceeded, the DANGER LED lights.		
ilais		Setting range	10 V to 99 V, OFF		
		Resolution	1 V		
		Between the A and B terminals	250 V		
Measurement	Rated voltage	Between the terminals and chassis	250 V		
terminal	Rated current		100 mA		
	Measurement cate	gory	CAT-II		
	Valid terminal disp	lay	Terminals valid for measurement are indicated on the display.		
	110% terminal	•	Terminal for supplying 110% voltage of the AC line.		
	Nominal voltage ra	inge	100 V to 240 V, 50 Hz/60 Hz		
Power supply	Input voltage range	e	85 Vac to 250 Vac		
for the EUT	Rated output capa		1500 VA		
	Maximum operatin	•	15 A (Overcurrent protection is activated at approximately 15.75 A.)		
	Inrush current	J	70 Apeak max. (within 20 ms)		

^{*1} If voltage is measured with the A and B terminals open, measurements will be easily affected by induced voltage.

■ Interface (Common)

Item			TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC
REMOTE			Remote control box Re	onnect the following optio C01-TOS, RC02-TOS e HP01A-TOS, HP02A-TO	•		
SIGNAL I/O	SIGNAL I/O		D-sub 37-pin connector	. For the pin arrangement	:		
	Function		Enable/disable interlock, recall setup memories, recall auto test programs, start/stop testing, monitor the test and voltage generation status, monitor the test status, monitor judgment results, monitor the step execution status of auto tests, monitor the activation status of protection functions				
	Input specifica	tions		l low-active control. The in all open is equivalent to a			
		High-level input voltage	11 V to 15 V				
		Low-level input voltage	0 V to 4 V				
		Low-level input current	-5 mA max.				
		Input time width	5 ms min.				
		Output method	Open collector output (4	1.5 Vdc to 30 Vdc)			
	Output	Output withstanding voltage	30 Vdc				
	specifications	Output saturation voltage	Approx. 1.1 V (25 °C)				
		Maximum output current	imum output current 400 mA(TOTAL)				
STATUS OUT			Output terminal of an option product.				
	Positive termin	nal (red)	Outputs +24 V. Use Status Out of CONFIG settings to set the output conditions.				
	Negative termi	inal (black)	+24 V circuit common.				
SCANNER			MINI DIN 8-pin connector. Terminal for the optional TOS9320 high voltage scanner.				
SCANNER			The maximum number of connections is 4 devices(16 channels).				
USB (host)			Standard type A socket, FAT32, 32 GB or less Complies with the USB 2.0 specifications; data rate: 12 Mbps (full speed)				
Remote control			All functions except turning on and off the power, key lock, and auto test can be remotely controlled.				
	RS232C	Hardware		(EIA-232D compliant) 38400, 57600, 115200 b bits: 1 bit; parity bit: none		-RTS	
		Message terminator	LF during reception, LF	during transmission.			
		Hardware	Standard Type B conne	ctor. Complies with the U	SB 2.0 specifications; da	ta rate: 480 Mbps (high	speed)
	USB (device)	Message terminator	LF or EOM during recep	otion, LF + EOM during tra	ansmission.		
		Device class	Complies with the USB	TMC-USB488 device clas	ss specifications.		
		Hardware	IEEE 802,3 100Base-T	X/10Base-T Ethernet. Aut	to-MDIX compliant.IPv4,	RJ-45 connector.	
		Compliant standards	LXI 1.4 Core Specificati	on 2011			
	LAN	Communication protocol	VXI-11, HISLIP, SCPI-R	AW, SCPI-Telnet			
		Message terminator		ND during reception, LF -		on.	
Display			7-inch LCD				

■ Other Functions (Common)

Item	Item		TOS9301	TOS9302	TOS9303	TOS9303LC		
Auto test		Auto execution by comb	$Auto\ execution\ by\ combining\ ACW,\ DCW,\ IR,\ and\ EC.\ For\ LC,\ a\ combination\ is\ possible\ only\ using\ TC,\ PCC,\ and\ Patient.$					
Test condition	Setup memory	Up to 50 test conditions (ACW, DCW, IR, EC, LC) can be saved.						
memory	Program memory	Up to 125 program (ACV	V, DCW, IR, EC) combina	ations, each containing 1	00 steps, can be saved.			
memory	Program memory (LC)	Up to 125 program (TC, PCC, Patient) combinations, each containing 100 steps, can be saved.						
Test result mem	ory	Records up to 1000 late	st test result of independ	ent tests and auto tests.	These are cleared when	the power is turned off.		
	Oly	Test results can be save	ed in CSV format to a USI	3 memory device.				
System clock		For recording the calibra	ation time and test times					
	Recordable time	Up to year 2038						
	Calibration period setting	Displays a warning at po	ower-on when the specific	ed period passes. Select	whether to activate a pro	otection function or only		
	Calibration period setting	display a warning in the display area when a warning occurs.						
Measurement d	isplay	Maximum and minimum measurements can be displayed.						
	Normal	Displays measurements during a test. Maximum and minimum values are not held.						
		Displays the maximum current measurement for withstanding voltage (ACW/DCW) tests, the minimum resistance						
	Maximum and minimum value display	measurement for insulation resistance (IR) tests, the resistance measurement or voltage measurement for earth continuity (EC) tests.						
	Double Action	When you press STOP, "READY" is shown for 0.5 seconds. A test starts only when you press START within this period.						
Test start method	Momentary	Tests are only executed while the START switch is held down.						
memou	Start Long		A test starts only when the START switch is held down for at least 1 second.					
PASS judgment	display time (Pass Hold)	Set the time to hold the pass judgment result display (0.05 s to 10.00 s) or hold it until STOP is pressed (Infinity).						
STOP signal dis	STOP signal disable (Fail Mode)		It is possible to set the instrument so that fail judgment results and PROTECTION mode cannot be released from a device					
510F Signal dis	able (I all Mode)	connected to the SIGNA	AL I/O connector or REM	OTE connector.				
Key lock		Lock the operation of th	Lock the operation of the keys to prevent changing the settings or overwriting memory or programs by mistake.					



■ Other Functions (Common)

Item		TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC		
		If a protection function	s activated during a test,	the output is shut off and	the test is stopped imm	nediately.In an LC test,		
Protection	functions	the power supply to the	EUT is stopped, and the	A and B terminals are op	ened.Conditions that ca	ause a protection function		
		to be activated are as for	ollows.					
	Interlock	Interlock is activated.						
	Power Supply	There is an error in the	power supply section.					
	Output Error	An output voltage outsi	de of the following range ng + 2 A)	is detected. ACW, DCW,	IR test: ±(10 % of settin	g + 50 V)		
	Over Load		An output power outside of the following range is detected. ACW: 550 VA, DCW: 110 W, EC: 240 VA, LC: AC LINE OUT current exceeded approx. 15.75 A or the power exceeded 1600 VA.					
	Over Heat	The internal temperatur	The internal temperature of the product is abnormally high.					
	Over Rating	During a withstanding v	During a withstanding voltage test, an output current is generated for a length of time that exceeds the output time limit					
	Cal	The preset calibration p	The preset calibration period is exceeded.					
	Remote	The REMOTE connector	The REMOTE connector is connected or disconnected.					
	Signal I/O	There is a change in the	There is a change in the SIGNAL I/O connector's ENABLE signal.					
	Communication	An internal communica	tion error is occurring.					
	Over Range	A value exceeding the maximum value of the measurement range is detected.						
	Measure	An error is detected in t	he LC test measurement	check.				
	Short	A relay operation error is detected in an LC test.						
	Earth Fault	When the grounding mo ground.	ode (GND) is set to Guard	l, abnormal current flows	from the high voltage o	utput of this product to		
	Scan I/F	While scanning, the inte	erface cable is disconnec	ted. Or, the channel-assi	igned scanner is not det	ected.		

■ General Specifications (Common)

Item	Item		TOS9300	TOS9301	TOS9302	TOS9303	TOS9303LC		
Backup battery	Backup battery life		3 years (at 25 °C)						
	Installation loc	cation	Indoors, 2000 m or less						
	Spec guara-	Temperature	5 °C to 35 °C (41 °F to 9	5 °C to 35 °C (41 °F to 95 °F)					
	nteed range	Humidity	20 %rh to 80 %rh (no c	20 %rh to 80 %rh (no condensation)					
Environment	Operating	Temperature	0 °C to 40 °C (32 °F to	0 °C to 40 °C (32 °F to 104 °F)					
	rang	Humidity	20 %rh to 80 %rh (no condensation)						
	Storage	Temperature	-20 °C to 70 °C (-4 °F to	158 °F)					
	range	Humidity	90 %rh or less (no cond	densation)					
	Nominal volta	0 0	100 Vac to 120 V, 200 V	/ to 240 V (90 Vac to 132	V, 170 V to 250 V)				
Power supply	Power	No load(READY state)	100 VA or less						
	consumption	Rated load	800 VA max.	800 VA max					
	Allowable free	uency range	47 Hz to 63 Hz						
Insulation resis	tance (between	AC LINE and chassis)	30 MΩ or more (500 Vo	30 MΩ or more (500 Vdc)					
Withstanding vo	oltage (between	AC LINE and chassis)	1500 Vac, 1 minute, 20 mA or less						
Earth continuity	/		25 Aac, 0.1 Ω or less						
\\/aiabt			TOS9300: Approx. 17 kg (37.5 lb.), TOS9301: Approx. 18 kg (39.7 lb.), TOS9302: Approx. 20 kg (44.1 lb.),						
Weight			TOS9303: Approx. 21 kg (46.3 lb.), TOS9303LC: Approx. 22 kg (48.5 lb.)						
			Power cord (1 pc., *length: 2.5 m : The attached power cord varies depending on the shipment destination.)						
			High-voltage test leadTL31-TOS (1 pair), SIGNAL I/O plug (1 set), High-voltage warning sticker (1 pc.),						
Accessories			Setup Guide (1 copy), CD-ROM (1 disc), Safety Information (1 copy),						
				abel (1 pc., *Not included		T00000010 1)			
			Test leads for earth continuity testTL13-TOS (1 pair., *TOS9302, TOS9303,TOS9303LC only) [TOS9303LC only: Spare fuse (1 pc.), Test leads for leakage current test (2 red, 1 black), Flat probe (1 sheet)]						
						z reu, i biack), Fiat prot	De (1 Sileet)j		
			Complies with the requirements of the following directive and standards. EMC Directive 2014/30/EU						
Electromagnetic compatibility *1 *2		EN 61326-1 (Class A *3), EN 55011 (Class A *3, Group 1 *4), EN 61000-3-2, EN 61000-3-3							
		Applicable under the following conditions							
, ,			The maximum length of all cabling and wiring connected to the prod-uct must be less than						
			2.5 m.Shielded cables	are being used when usin	g the SIGNAL I/O.The hig	gh-voltage test lead			
			TL31-TOS is in use.Ele	ctrical discharges are app	olied only to the EUT.				
Safety *1	·			irements of the following of		·			
Carcty 1			Low Voltage Directive 2	Low Voltage Directive 2014/35/EU *2, EN 61010-1 (Class I *5 , Pollution Degree 2 *6)					

- *1 Does not apply to specially ordered or modified products.
- *2 Limited to products that have a CE mark.
- *3 This is a Class A instrument. This product is intended for use in an industrial environment. This product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interference to the reception of radio and television broadcasts.
- *4 This is a Group 1 instrument. This product does not generate and/or use intentionally radio-frequency energy, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material or inspection/anal-ysis purpose.
- *5 This is a Class I instrument. Be sure to ground this product's protective conductor terminal. The safety of this product is guaranteed only when the product is properly grounded.
- *6 Pollution is addition of foreign matter (solid, liquid or gaseous) that may produce a reduction of dielectric strength or surface resistivity. Pollution Degree 2 assumes that only non-conductive pollution will occur except for an occasional temporary conductivity caused by condensation.

■ High Voltage Scanner

[Basic specifications]

Item		TOS9320	
Maximum aparating valtage	AC	5 kV	
Maximum operating voltage	DC	7.2 kV	
Number of channels		4 (Each channel can be set to high, low, or open.)	
		4 units	
Maximum connections		Channel numbers are assigned according to the order in which connections are made to the TOS9300 series tester.	
		1st scanner: CH1 to CH4, 2nd scanner:CH5 to CH8, 3rd scanner: CH9 to CH12, 4th scanner: CH13 to CH16	
Contact check function		Available	
	DANGER	Lights in sync with the TOS9300 series tester	
Indicators	CHANNEL	Indicates the setting of each channel with color. Red: High, Green: Low, Orange: Contact being checked, Off: Open	
	EXTERNAL	Lights when external control is on	
	POWER	Lights when the power is on	

[Interface and other functions]

Item			TOS9320		
Control switch	Control switch		EXTERNAL I/O switch for switching the following controls. ON: External control through the CONTROLLER INTERFACE OFF: Control from the TOS9300 series tester		
CONTROLLER I	NTERFACE (e	external control)	D-sub 25-pin connector.		
	Function		Sets each channel to high or low or all channels to open. Outputs the setting of each channel.		
			The input signals are all low-active control. The input terminal is pulled up to +12 V by a resistor. Leaving the input terminal		
			open is equivalent to applying a high level signal.		
		High-level input voltage	11 V to 15 V		
	Input	Low-level input voltage	0 V to 4 V		
		Low-level input current	-5 mA max.		
		Input time width	5 ms min.		
		Output method	Open collector output (4.5 Vdc to 30 Vdc)		
	0	Output withstanding voltage	30 Vdc		
	Output	Output saturation voltage	Approx. 1.1 V (25°C, 77°F)		
		Maximum output current	400 mA (TOTAL)		
TOS9300 series	tester interfac	e	MINI DIN 8-pin connector. Accuracy guaranteed up to 4 units (16 channels)		

[General specifications]

Item			TOS9320		
	Installation location	n	Indoors, 2000 m or less		
	Spec guaranteed	Temperature	5°C to 35°C (41°F to 95°F)		
	range	Humidity	20%rh to 70%rh (no condensation)		
Environment	Operating renge	Temperature	0°C to 40°C (32°F to 104°F)		
	Operating range	Humidity	20%rh to 80%rh (no condensation)		
	Ctoroso rongo	Temperature	-20°C to 70°C (-4°F to 158°F)		
	Storage range	Humidity	90%rh or less (no condensation)		
D	Nominal voltage ra (allowable voltage		100 Vac to 240 Vac (90 Vac to 250 Vac)		
Power supply	Power consumptio	n	50 VA max.		
	Allowable frequence	cy range	47 Hz to 63 Hz		
Insulation resist	tance (between AC L	INE and chassis)	30 MΩ or more (500 Vdc)		
Withstanding vo	oltage (between AC L	.INE and chassis)	1500 Vac for 1 minute, 20 mA or less		
Earth continuity	1		25 Aac/0.1 Ω or less		
Weight			Approx. 8 kg (17.6 lb)		
Accessories			Power cord (1 pc., length: 2.5 m: The attached power cord varies depending on the shipment destination.) High-voltage test lead [TL31-TOS] (8 red), Lead for high voltage parallelconnection TL33-TOS (1 pair), Interface cable (1 pc.), CONTROLLER INTERFACEplug (1 set), High-voltage warningsticker (2 pc.), Channel labels (For the panel (1 sheet), For the test leads (1 sheet)), User's manual (1 copy), Safety Information (1 copy)		
Electromagnetic compatibility *1 *2			Complies with the requirements of the following directive and stan-dards. EMC Directive 2014/30/EU, EN 61326-1 (Class A *3), EN 55011 (Class A *3, Group 1 *4), EN 61000-3-2, EN 61000-3-3 Applicable under the following conditions		
			The maximum length of all cabling and wiring connected to this product is less than 2.5 m. A shielded cable is used for the connection to the CONTROLLER INTERFACE. The high-voltage test lead TL31-TOS is in use. Electrical discharges are applied only to the EUT.		
Safety *1			Complies with the requirements of the following directive and stan-dards. Low Voltage Directive 2014/35/EU *2, EN 61010-1 (Class I *5, Pollution Degree 2 *6)		

^{*1} Does not apply to specially ordered or modified products.

^{*2} Limited to products that have a CE mark.

^{*3} This is a Class A instrument. This product is intended for use in an industrial environment. This product may cause interference if used in residential areas. Such use must be avoided unless the user takes special measures to reduce electromagnetic emissions to prevent interference to the reception of radio and television broadcasts.


^{*4} This is a Group 1 instrument. This product does not generate and/or use intentionally radio-frequency energy, in the form of electromagnetic radiation, inductive and/or capacitive coupling, for the treatment of material or inspection/anal-ysis purpose.


^{*5} This is a Class I instrument. Be sure to ground this product's protective conductor terminal. The safety of this product is guaranteed only when the product is properly grounded.


^{*6} Pollution is addition of foreign matter (solid, liquid or gaseous) that may produce a reduction of dielectric strength or surface resistivity. Pollution Degree 2 assumes that only non-conductive pollution will occur except for an occasional temporary conductivity caused by condensation.


External Dimensions (Unit:mm(inches))



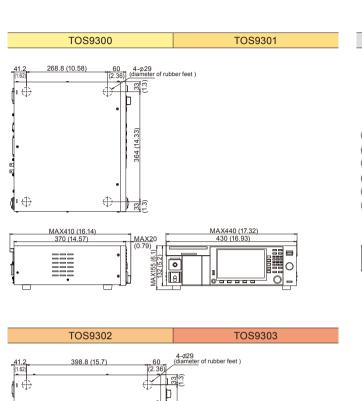

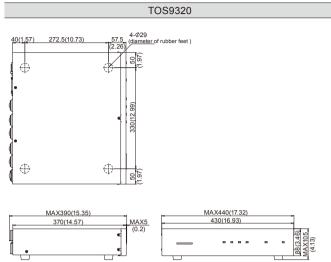

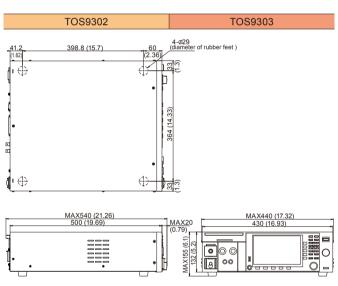

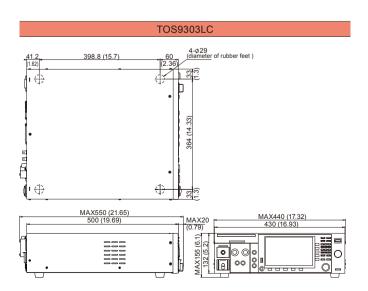

High-Voltage Scanner

TOS9320



Dimensions(Maximum) / Weight

430(16.93")(440(17.32"))W×88(3.46")(105(4.13"))H× 370(14.57")(390(15.35"))Dmm/ 8 kg(17.6 lbs)

High Voltage Scanner for TOS9300 Series for Multi-Channel Testing Systems

The high voltage scanner TOS9320 is a specialized option for the TOS9300 series, capable of rapidly distributing test voltage from the main unit to multiple testing points for withstanding voltage and insulation resistance testing. Channels can be controlled with an external device through the back panel CONTROLLER INTERFACE connector. Remote control is not limited to the TOS9300 series but is also compatible with previous models such as the TOS5300 series hipot/insulation resistance tester. The TOS9320 high-voltage scanner is an essential tool for the automation of highly reliable testing of electronic devices among multiple channels.

Features

- ■Output can be expanded to four channels with one high-voltage scanner. The electric potential of each channel can be arbitrarily set to high, low, or open, and can be tested at any of these four points.
- ■Up to four high voltage scanners (total 16 channels) can be connected to each unit.
- ■Output of each channel and contact with testing points can be easily monitored.

Remote Control Box

The remote control box can be used to start and stop withstanding voltage and insulation resistance tests. One model is for use with one hand, and the other model is for use with two hands.

RC01-TOS (One-hand operation/1.5 m)



*DD-5P/9P DIN conversion cable required for connection with TOS9300 series.

RC02-TOS (Two-hand operation/1.5 m)



*DD-5P/9P DIN conversion cable required for connection with TOS9300 series.

DIN Conversion Cable

The DIN (5 pin \rightarrow 9 pin) conversion cable is used for connection with the following optional products and the TOS9300 series.

- Remote control box(RC01-TOS/RC02-TOS)
- High voltage test probe(HP01A-TOS/HP02A-TOS)

DD-5P/9P Adaptor/DIN to Mini DIN



Multi Outlet

The multi outlet OT01-TOS can be used to connect to main plugs throughout the world by connecting to the AC LINE OUT terminal block of the EUT power supply

OT01-TOS



Warning Light Unit

The warning light unit indicates when the TOS9300 is performing a test, making clear that a test is in progress from a distance.

PL02-TOS (for AC/DC24 V)



High Voltage Test Probe

This probe is used for generating test voltage. This probe has been designed to only generate test voltage when the user operatates the probe with both hands in order to prevent accidental test voltage generation.

- HP01A-TOS (Max.AC4 kV DC5 kV/1.8 m)
- HP02A-TOS (Max.AC4 kV DC5 kV/3.5 m)



*DD-5P/9P DIN conversion cable required for connection with TOS9300 series.

Rack Mount Bracket

Complied Model	JIS Standard	EIA Standard		
Complied Wodel	Bracket Model Name	Bracket Model Name		
	KRB150-TOS	KRB3-TOS		
TOS9300 TOS9301 TOS9301PD TOS9302 TOS9303 TOS9303LC	KRB150-TOS THE STATE OF THE ST	KRB-TOS Transport of the state		
	KRB100-TOS	KRB2-TOS		
TOS9320	KRB100-TOS GEORGIA	KRB2-TOS GET(EST) GET(ES		

Others



High-Voltage Digital Voltmeter

- ●Measurement of high voltages (AC/DC) of up to 10 kV
- •High measuring accuracy and input resistance
- ●Light weight of only 3 kg ●Compact design
- •Excellent ease of maintenance

149-10A



Specification	
Туре	Double integration type. (sampling cycle: 3 times/sec)
DC Voltage	Measuring range: 0.500 kV to 10,000 kV Accuracy: $\pm (0.5~\%$ of reading + 0.03 % of range) Input resistance: 1000 M Ω \pm 2 %
AC Voltage	Measuring range: 0.500 kV to 10,000 kV Accuracy: \pm (1 % of reading + 0.05 % of range) Frequency characteristics: 50/60 Hz (sine wave rms value display of mean value response) Input resistance: 1000 M Ω \pm 2%
Power	100 V ±10%, Approx. 10 VA
Dimensions (MAX)	134[5.27 inch]W × 164[6.46 inch]H × 270[10.63 inch]D mm (140[5.51 inch]W × 189[7.44 inch]H × 350[13.78 inch]D mm)
Weight	Approx. 3 kg (6.6 lbs)
Accessories	TL05-TOS High voltage test leads: 1 HTL2.5DH High voltage test lead: 1

Calibration Resistor for Insulation Resistance Tester

The 929 Series Standard Resistors are for calibration of Insulation Testers.

■ 929-1M (1 M Ω) ■ 929-10M (10 M Ω)

929-100M (100 MΩ)



Specification	
Nominal Resistance	1 MΩ(929-1M)/ 10 MΩ(929-10M) 100 MΩ(929-100M)
Accuracy of Resistance	1 % at 25 °C ±10 °C
Temperature Coefficient	100 ppm/°C or better
Voltage Coefficient	1 ppm/V or better
Working voltage rating	1.2 kV
Dimensions (MAX)	64[25.20 inch]W × 24[9.45 inch]H × 30[11.81 inch]D mm

^{*}The 929 series standard resistors can not be installed directly to the TOS series. Please use the test lead for connection.

Hipot Tester Current Calibrator

- ●Calibration of Leakage Current Detection Sensitivity
- •Direct Reading of Error from Error Display Scale
- ●Ammeter Ranges ●Eliminates Need for Power Supply
- ●AC/DC Selection Switch

TOS1200



Specification	
Measuring Function	Measurement of current values and error(%) for AC (50/60 Hz) and DC at a test voltage of 1000 V
Measuring Ranges	8 ranges consisting of 0.5/1/2/5/10/20/50/ 100 mA along with values equal to 0.8 times the values of those ranges (for 1, 2, 4 and 8 steps)
Ammeter Scale	Main scale: Direct-reading error display scale over a range of ±10% of the above full scale values Auxiliary scale: Ratio scale of 0 to 1.1 times the above full scale values (equivalent to 0% display of main scale when the ratio is equal to 1)
Ammeter Accuracy	Main scale: ±1 % of reading Auxiliary scale: ±3 % of full scale value
Ammeter Indication	DC/AC (sine wave rms value calibration of mean value response)

Load Resistance

Range[mA]	Resistance[kΩ]		Resistance[kΩ] Range[mA]			
0.5	2000		10	100		
1	1000		20	50		
2	500		50	20		
5 200			100	10		

Allowed Input	0.5/1/2/5 mA ranges: Continuous			
Time	10/20/50/100 mA ranges: 60 sec.			
	Max. 1/3 of duty cycle			
Dimensions	134[5.28 inch]W × 164[6.46 inch]H ×			
(MAX)	270[10.63 inch]D mm			
()	(140[5.51 inch]W × 190[7.48 inch]H ×			
	310[12.20 inch]D mm)			
Weight	Approx. 3.5 kg (7.72 lbs)			
Accessories	TL04-TOS High-voltage test lead: 1			

UL Resistance Load

This device is described in section 125, paragraph 2-1B1 of UL1492. The RL01-TOS is a variable load resistor for checking the output voltage of hipot testers used in dielectric strength testing on production lines. (Complies with UL regulations including UL1270, UL1409 and UL1410.)

RL01-TOS



Specification				
Resistors	120 kΩ/ 159 kΩ/ 210 kΩ/ 279 kΩ/ 369 kΩ/ 489 kΩ/ 648 kΩ/ 858 kΩ/ 1,137 kΩ/ 1,500 kΩ/ 1,989 kΩ/ 2,148 kΩ			
Resistance Accuracy	+1 %, -0 % of nominal value when set to 120 k Ω , ±1 % of nominal value when set to other values			
Maximum Operating Voltag	1300 V (continuous rating)			
Maximum Overload Voltage	1400 V for 5 seconds (application may not be repeated within 1 minute)			
Dimensions (MAX)	200[7.87 inch]W × 100[3.94 inch]H × 260[10.24 inch]D mm (210[8.27 inch]W × 120[4.72 inch]H × 295[11.61 inch]D mm)			
Weight	Approx. 2.6 kg (5.73 lbs)			
Accessories	TL04-TOS High-voltage test lead: 2 TL05-TOS High-voltage test lead: 1			

Lineup Overview

●Electrical Safety Multi-analyzer

	Test items					
Model	4	<u>4</u>		8		
	AC Withstanding Voltage (AC Hipot)	DC Withstanding Voltage (DC Hipot)	Insulation Resistance	Earth Continuity (Ground Bond)	Leakage Current	Partial Discharge
T0S9300	•		•			
T0S9301	•	•	•			
TOS9301PD Under development	•	•	•			•
T0S9302	•			•		
T0S9303	•	•	•	•		
T0S9303LC	•	•	•	•	•	

Option

Description	Model	Remark		
High-voltage scanner	TOS9320	4 channel high voltage scanner with contact check function; can be used standalone		
Bt	RC01-TOS	One-hand operation/1.5 m		
Remote control box	RC02-TOS	Both-hands operation/1.5 m		
DIN conversion cable	DD-5P/9P	It is required when RC01-TOS/RC02-TOS, HP01A-TOS/HP02A-TOS and HP21-TOS is used		
Ligh valtage teet weeks	HP01A-TOS	Max.AC4 kV • DC5 kV/1.8 m		
High voltage test probe	HP02A-TOS	Max.AC4 kV • DC5 kV/3.5 m		
Test probe for touch current test	HP21-TOS	Test probe for TOS9303LC. Max.250 V rms • 100 mA/ 1.8 m		
Warning light unit	PL02-TOS	for AC/DC24 V		
Multi outlet	OT01-TOS	for TOS9303LC		
	KRB150-TOS	JIS standard (mm) for TOS9300/9301/9301PD/9302/9303/9303LC		
Rack mount bracket	KRB3-TOS	EIA standard (inch) for TOS9300/9301/9301PD/9302/9303/9303LC		
Rack mount bracket	KRB100-TOS	JIS standard (mm) for TOS9320		
	KRB2-TOS	EIA standard (inch) for TOS9320		



Southwood 4F,6-1 Chigasaki-chuo, Tsuzuki-ku, Yokohama, 224-0032, Japan Phone: (+81)45-482-6353, Facsimile: (+81)45-482-6261, www.kikusui.co.jp

KIKUSUI AMERICA, INC.1-310-214-0000 www.kikusuiamerica.com



3625 Del Amo Blvd, Suite 160, Torrance, CA 90503 Phone: 310-214-0000 Facsimile: 310-214-0014

KIKUSUI TRADING (SHANGHAI) Co., Ltd. www.kikusui.cn



Room 305, Shenggao Building , No.137, Xianxia Road, Shanghai City, China Phone : 021-5887-9067 Facsimile : 021-5887-9069

For our local sales distributors and representatives, please refer to "sales network" of our website.

Distributor/Representative

■ All products contained in this catalogue are equipment and devices that are premised on use under the supervision of qualified personnel, and are not designed or produced for home-use or use by general consumers. ■ Specifications, design and so forth are subject to change without prior notice to improve the quality. ■ Product names and prices are subject to change and production may be discontinued when necessary. ■ Product names, company names and brand names contained in this catalogue represent the respective registered trade name or trade mark. ■ Colors, textures and so forth of photographs shown in this catalogue may differ from actual products due to a limited fidelity in printing. ■ Although every effort has been made to provide the information as accurate as possible for this catalogue, certain details have unavoidably been omitted due to limitations in space. ■ If you find any misprints or errors in this catalogue, it would be appreciated if you would inform us. ■ Please contact our distributors to confirm specifications, price, accessories or anything that may be unclear when placing an order or concluding a purchasing agreement.